









**NEXIS Video Wall Processor  
User's Manual**

Version1.6


# The indications of symbols

## ■ Safety instructions

Some symbols pointing out the potential risk of injury and property loss are used in the instructions and devices, to help you use the devices safely and properly. Symbols and their indications are as follows. Please make sure that you have known these instructions before reading the manual.

	<p>Remind users to operate and maintenance according to the instructions attached to the devices. If ignoring this information, it may cause death or injury due to wrong operations.</p>
	<p>Remind users that uninsulated dangerous voltage in devices may lead to electric shock.</p>
	<p>CE certification means that the product has reached the safety requirements specified by EU regulations, users can be assured.</p>
	<p>SGS certification means that the product has reached the quality standards of the world's largest Societe Generale de Surveillance.</p>
	<p>This product has passed ISO9001 international quality certification (certification bodies: Rheinland TUV).</p>
	<p>WARNING: To avoid electric shock, do not open the cover, and do not place unnecessary portion in the chassis. Please contact qualified service personnel.</p>

## ■ General information indications

	<p>Information that may lead to an unsuccessful operation or setting and other relevant information needed to be noticed is listed.</p>
---	---

# Important notes



## Warning

To ensure reliable use of devices and safety of personnel, please observe the following items in the installation, use and maintenance.

### Notes in installation

- ◆ Do not use this product in the following places: Where exists dust, smoke, conductive dust, corrosive gases or flammable gases; where exposes to high temperature, condensation or wind and rain; where exists vibration and shock. Electric shock, fire, incorrect operation will also lead to product damage and deterioration;
- ◆ During screw hole processing and wiring, metal chips and wire heads shall not be dropped into ventilation holes of controllers, which may cause a fire, malfunction or incorrect operation;
- ◆ When the installation work is done, make sure that no foreign body is left on the surface of ventilation, including contact paper and other packaging materials, otherwise it may lead to poor run-time heat, causing a fire, malfunction or incorrect operation;
- ◆ Avoid wiring or inserting/pulling plugs in charged state, otherwise it may easily lead to electric shock or cause damage to the circuit;
- ◆ Installation and wiring must be solid and reliable, poor contact may result in incorrect operation;
- ◆ For application in occasions with severe interference, shielded cables should be used to input and output high-frequency signal so that anti-interference performance of the system could be improved.

### Notes in wiring

- ◆ All of the external power supply must be cut off before carrying out installation, wiring and other operations, or it may cause electric shock or equipment damage;
- ◆ This product is grounded through the grounding conductor of the power cord. In order to avoid electric shock, the grounding conductor must be connected to earth. Before connecting the input or output terminals of the product, make sure that the product is properly grounded;
- ◆ Once wiring is completed, foreign matters should be immediately removed. Please cover the terminal covers of product before power connection to avoid electric shock;

### Notes in operation and maintenance

- ◆ Do not touch the terminal when power is on, or it may cause electric shock or incorrect operation;
- ◆ Perform cleaning and terminal tightening when power is off, for these operations may cause electric shock when power is on;
- ◆ Perform connection, removal or other operations of the communication signal cables and the cables of expansion board or control unit after power is off, or it may cause equipment damage or incorrect operation;
- ◆ Do not disassemble the equipment, so as not to damage the internal electrical components;
- ◆ Always read the manual, after security fully recognized, changing the program, commissioning, starting and stopping operations after security is fully recognized;
- ◆ Button batteries must be replaced when the power is off. When you indeed need to replace the button batteries with the power on, the operation should be performed by a qualified electrical

technician wearing insulated gloves.

#### **Notes in product obsolescence**

- ◆ Explosive electrolytic capacitors: It may cause explosion when electrolytic capacitor on the circuit board burns;
- ◆ Please collect and process separately, it cannot be put in the life garbage.
- ◆ Please process it as industrial waste, or process it in accordance with local environmental regulations.

#### **Notes in Specialized Video Wall Screens connection**

- ◆ Please turn off or disable the Loop / Daisy Chain function on the Video Wall Screens when connecting to the VW Series chassis. This function might cause conflict to VW Series input and output signal. Using VW series controller with Loop / Daisy Chain function is considered as improper connection, Warranty will be Voided.
- ◆ In case of using signal converter, only use the active converter to maintain proper signal and electrical characteristic. Passive converter might cause signal loss or power surges.

#### **Notes in Warranty Void**

The warranty only covers failures or malfunctions that occur during the warranty period and under normal use conditions as well as any material or workmanship defect.

The warranty will not apply to or be valid under conditions including but not limited to the following:

- The serial number of the NEXIS product, components or accessories has been altered, canceled, removed, or otherwise not valid as identified by NEXIS;
- The product has been tampered with, repaired and/or modified by non-authorized personnel;
- The product warranty seals have been broken or altered;
- There is damage caused by natural disaster, intentional or unintentional misuse, abuse, neglect, acts of war, improper maintenance, or use under abnormal conditions;
- There is damage caused by accidental drops, spills, fire, or power surges.
- There is damage from improper installation, improper connection, or use of parts and/or components not manufactured or sold by NEXIS;
- There is damage from use outside of the operation or storage parameters or environment detailed in the User's Manual or reasonably acceptable for similar product usage models deemed industry standard best practices;

We may amend, update or otherwise change, at any time and without prior notice, any or all of the Terms of Use, the conditions and/or the provisions included in this document.

# Contents

Chapter One Overview.....	1
<b>1.1 Product Equipment</b> .....	1
<b>1.2 function features</b> .....	2
<b>1.3 cabinet installation</b> .....	2
Chapter Two Hardware Introductions .....	3
<b>2.1 VW8208 panel diagram</b> .....	3
<b>2.2 VW8316 panel diagram</b> .....	3
<b>2.3 VW8736 panel diagram</b> .....	4
<b>2.4 VW81272 panel diagram</b> .....	5
<b>2.5 Link of matrix and peripherals</b> .....	7
2.5.1 Input interface description.....	7
2.5.2 Output interface description.....	7
2.5.3 Control board communication port and link method .....	7
2.5.4 Matrix RS-232 control interface .....	7
2.5.5 Link of matrix and control computer.....	7
2.5.6 Matrix KEYBOARD interface .....	7
2.5.7 Link of matrix and extended keyboard.....	8
2.5.8 Matrix Ethernet Interface .....	8
2.5.8.1 Hardware linking method.....	8
2.5.8.2 Connection Method Description of RJ45 Ethernet Port straight-through Line and Cross-line .....	8
2.5.9 HDMI port description .....	9
2.5.10 DVI port description .....	9
2.5.11 DB15 interface description.....	10
2.5.12 DB15 male socket transfer cable(S terminal, RCA head).....	10
2.5.13 DB15 male socket transfer cable definition .....	11
Chapter Three Control Panel Operating Instructions.....	12
<b>3.1 Panel description</b> .....	12
3.1.1 VW8208 Panel.....	12
3.1.2 VW8316 Panel.....	12
3.1.3 VW8736 Panel.....	13
3.1.4 VW81272 - VW8144144 Panel.....	13
<b>3.2 Input boards</b> .....	18
3.2.1 VW7804 HDMI Input board function features .....	18
3.2.2 VW7604 DVI Input board function features .....	18
3.2.3 VW7514 HDBaseT twisted pair input board function features.....	19
3.2.4 VW7104 VGA Input board function features.....	19
3.2.5 VW7404 SDI Input board function features .....	19
3.2.6 VW7704 Optical fiber input board function features .....	19
3.2.7 VW7002 RJ45 Input card Functions and Features.....	19

<b>3.3 Output boards</b> .....	20
3.3.1 VW8804 HDMI stitching output board function features .....	20
3.3.2 VW8604 DVI switching output board function features .....	20
3.3.3 VW8514 HDBaseT twisted pair stitching output board function features .....	20
3.3.4 VW8704 Optical fiber stitching output board function features .....	20
<b>3.4 Preview boards</b> .....	20
3.4.1 VW-PVW04 Preview board function features .....	20
<b>3.5 Control boards</b> .....	21
3.5.1 VW-CTN04 Control board function features .....	21
3.5.2 VW-CTN05 Advanced control board function features .....	21
<b>3.6 specifications and technical parameters</b> .....	22
Chapter Four Instructions .....	31
<b>4.1 NEXIS Processor instructions</b> .....	31
<b>4.2 Splicer instructions</b> .....	39
Chapter Five Software .....	41
<b>5.1 Connection</b> .....	41
<b>5.2 Interface introduction</b> .....	42
<b>5.3 Drag &amp;Drop to change the video source</b> .....	45
<b>5.4 Change the output window size</b> .....	45
<b>5.5 Save and Call the profile</b> .....	46
<b>5.6 Matrix switching control(Seamless output card is needed)</b> .....	47

# Chapter One Overview

NEXIS video wall processor can realize graphics processing and seamless switching flexibly. The matrix adopts high-performance hardware design, perfectly supports a variety of high-definition digital / analog signal switching and processing, and supports two-way RS-232, two-way IR signal assigned switching function. It can also divide a completed image signal into several signals assigned to several different display unites, forming a large display screen to display dynamic images. It provides a one-stop solution for various industries to assign, switch and process a variety of video and control signals, which can be widely used in radio and television engineering, multimedia conference room, large-screen display engineering, television teaching, intelligent traffic management centers, command and control centers and other places.

NEXIS video wall processor contains VW8208, VW8316, VW8736, VW81272, VW8144144 and other models, its signal input/output interface contains HDMI, DVI, VGA, HDBaseT, SDI, optical fiber and other video interfaces. Leading all-digital signal processing technology ensures undistorted processing, sending top quality screen to the display terminal. With customized configuration of various types of the same or different input/output boards, single interface type or multi interface type of matrix can be formed, such as optical fiber matrix, HDMI matrix, DVI matrix, CAT5 matrix, VGA matrix, YUV matrix, Video matrix and so on.

NEXIS video wall processor provides a variety of control modes, with remote control operation, RS-485 extended keyboard, but also provides two standard RS-232 communication interfaces and network ports, convenient for users to coordinate it with various remote control devices.

## 1.1 Product Equipment

VW8208  
VW8316  
VW8736  
VW81272  
VW8144144

Modular video wall processor can be composed of any of the following input and output boards:

### Input boards:

- ◆ VW7804 input board (HDMI signal input)
- ◆ VW7604 input board (DVI signal input)
- ◆ VW7514 twisted pair input board (HDBaseT signal input)
- ◆ VW7104 input board (CV, YPbPr, VGA signal input)
- ◆ VW7404 input board (SDI signal input)
- ◆ VW7704 optical fiber input board (OPTICAL FIBER signal input)

### Video wall output boards:

- ◆ VW8804 stitching output board (HDMI signal output)
- ◆ VW8604 stitching output board (DVI, RGB signal output)
- ◆ VW8514 twisted pair stitching output board (HDBaseT signal output)
- ◆ VW8704 optical fiber stitching output board (OPTICAL FIBER signal output)

### Preview board:

- ◆ VW-PVW04 preview board (video signal output)

### Control board:

- ◆ VW-CTN04 control board
- ◆ VW-CTN05 advanced control board

## 1.2 function features

All digital switching, each seamless output board can realize real-time seamless switching;

Each stitching output board can realize video stitching; picture windows in full screen can zoom, overlay and roam arbitrarily;

Preview board can realize previewing videos by group and switching function;

Support DVI 1.0 protocol, in line with HDCP1.3, compatible with HDMI 1.3a;

Support hot plug, support audio and video signal switching together;

Digital audio and analog audio in HDMI input board can be input selectively, digital audio and analog audio in HDMI output board can be output simultaneously;

Support PC software control switching and EDID management;

HDBaseT input/output signals support embedded (or local) two-way RS-232 and two-way IR signals, and can switch optionally with video signal or switch separately. They also support POC providing external power supply (VW8736 and its upgrades support POC);

◆ Flexible control with infrared remote control, RS485, RS232 communication interface and network ports, and can be controlled by distant HDBaseT / optical fiber serial ports, convenient for users to coordinate it with various remote control devices;

◆ Support firmware upgrade online;


◆ support intelligent control matrix fan operation;

◆ SDI input board has looping out function;

◆ VW8736 and its upgrades have redundant power supply design;

◆ Plug-in board structure design, flexibly allocate input/output signal type and signal channel number.

## 1.3 cabinet installation

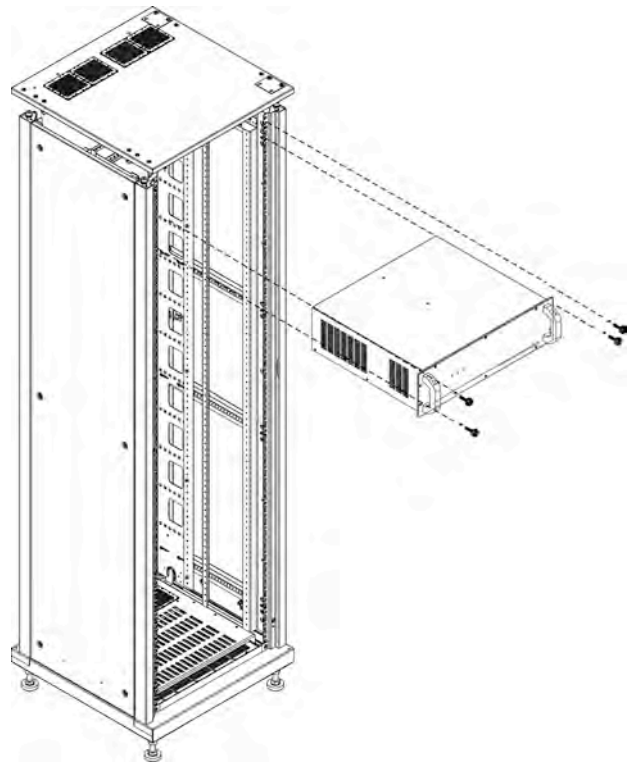





# Chapter Two Hardware Introductions

## 2.1 VW8208 panel diagram

VW8208 front panel:

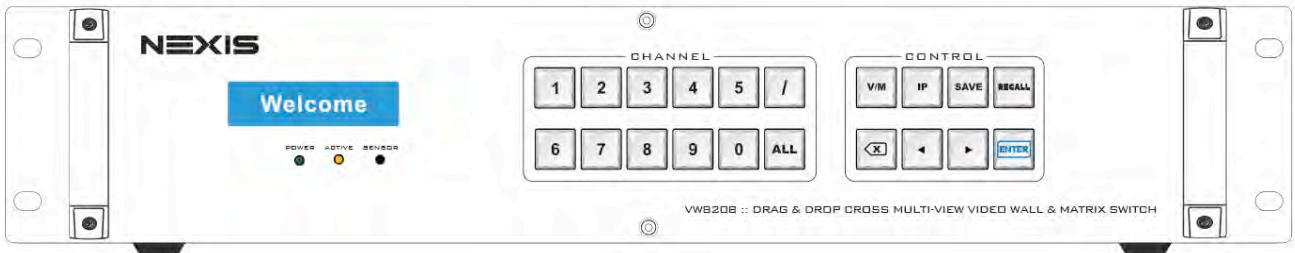


VW8208 back panel:

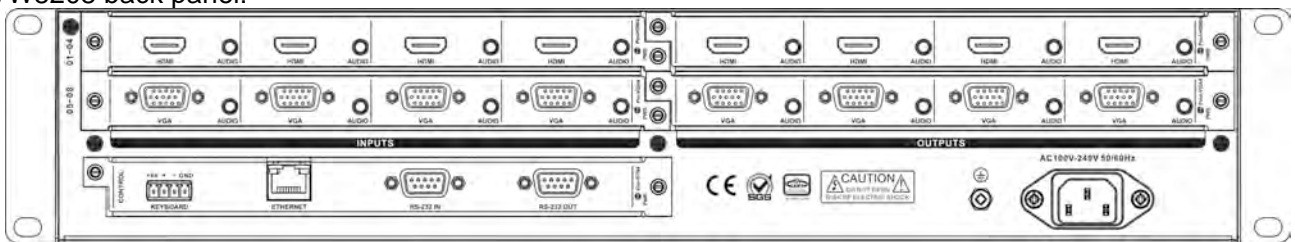


## 2.2 VW8316 panel diagram

VW8316 front panel:

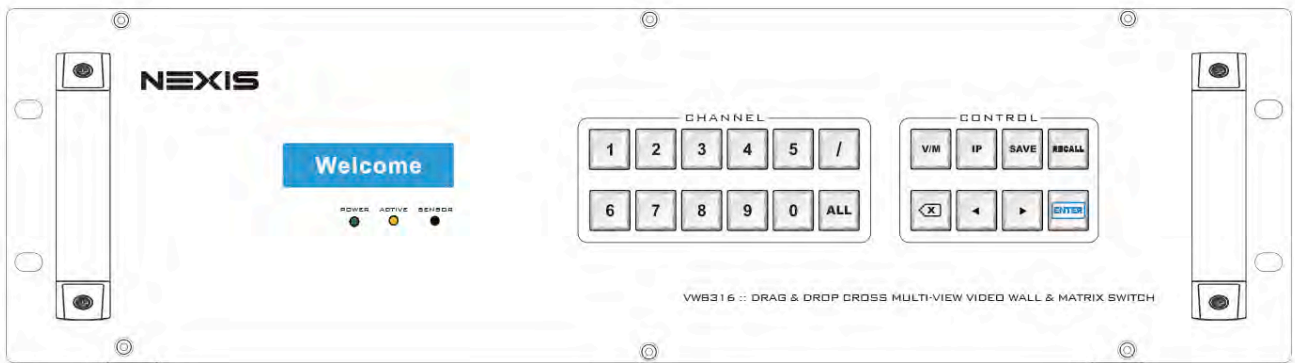


VW8316 back panel:

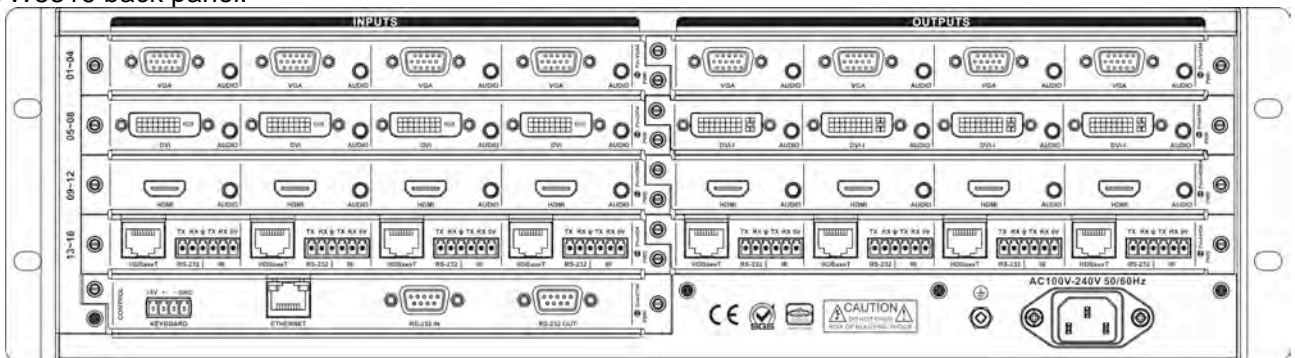


### 2.3 VW8736 panel diagram

VW8736 front panel:

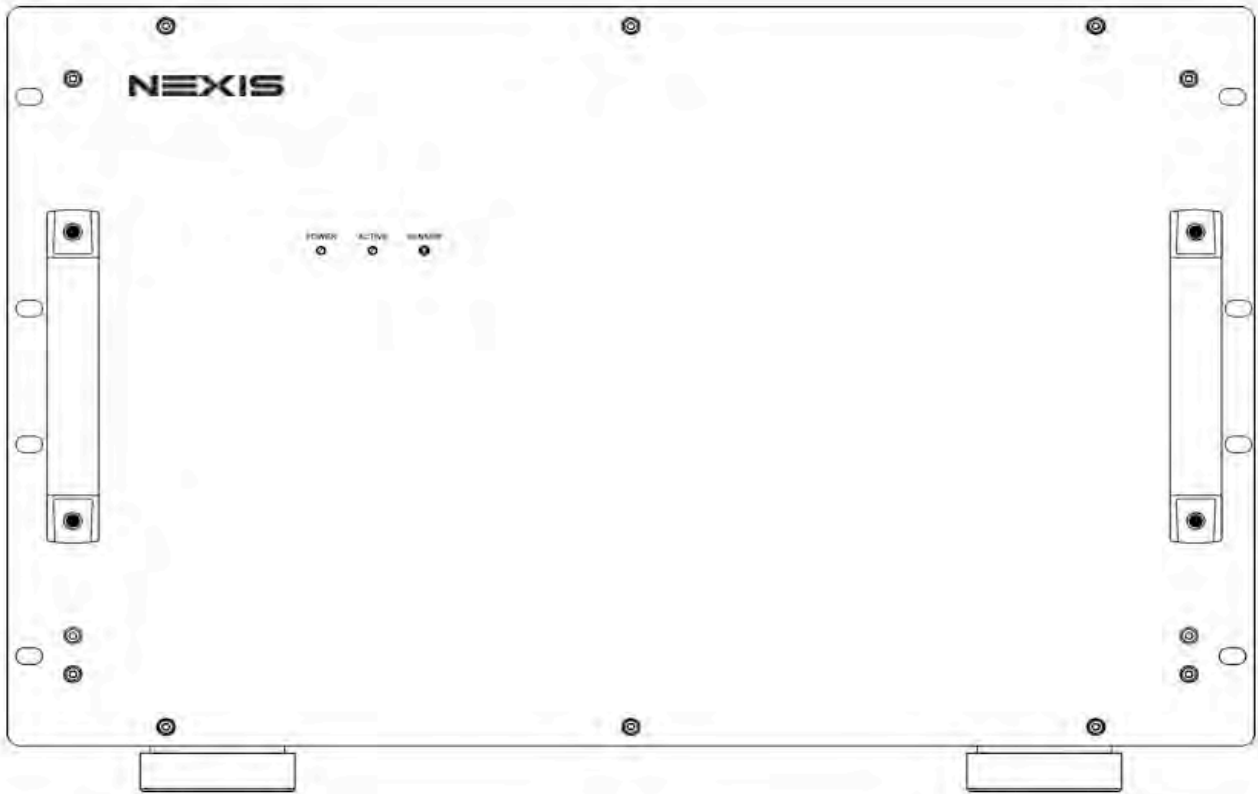


VW8736 back panel:

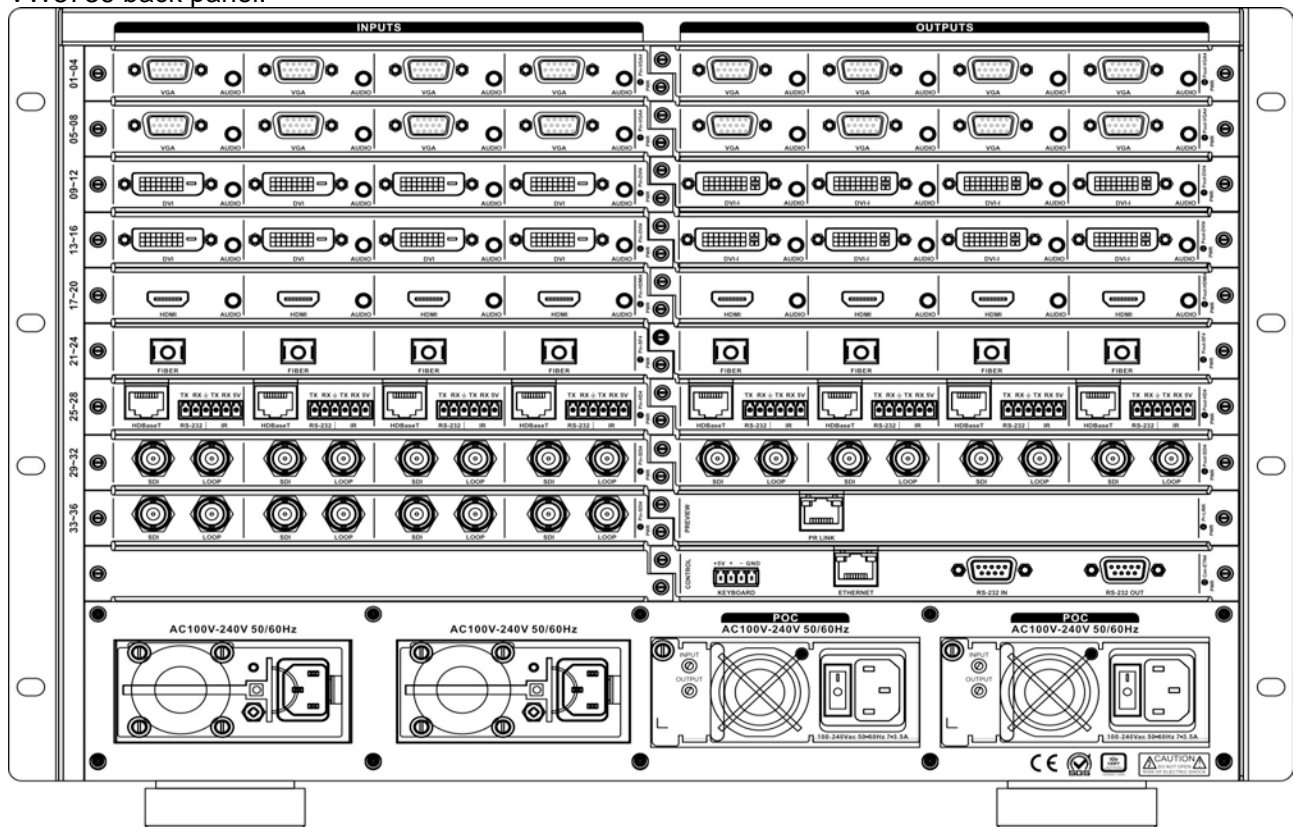


## 2.4 VW81272 - VW8144144 panel diagram

### VW81272 front panel

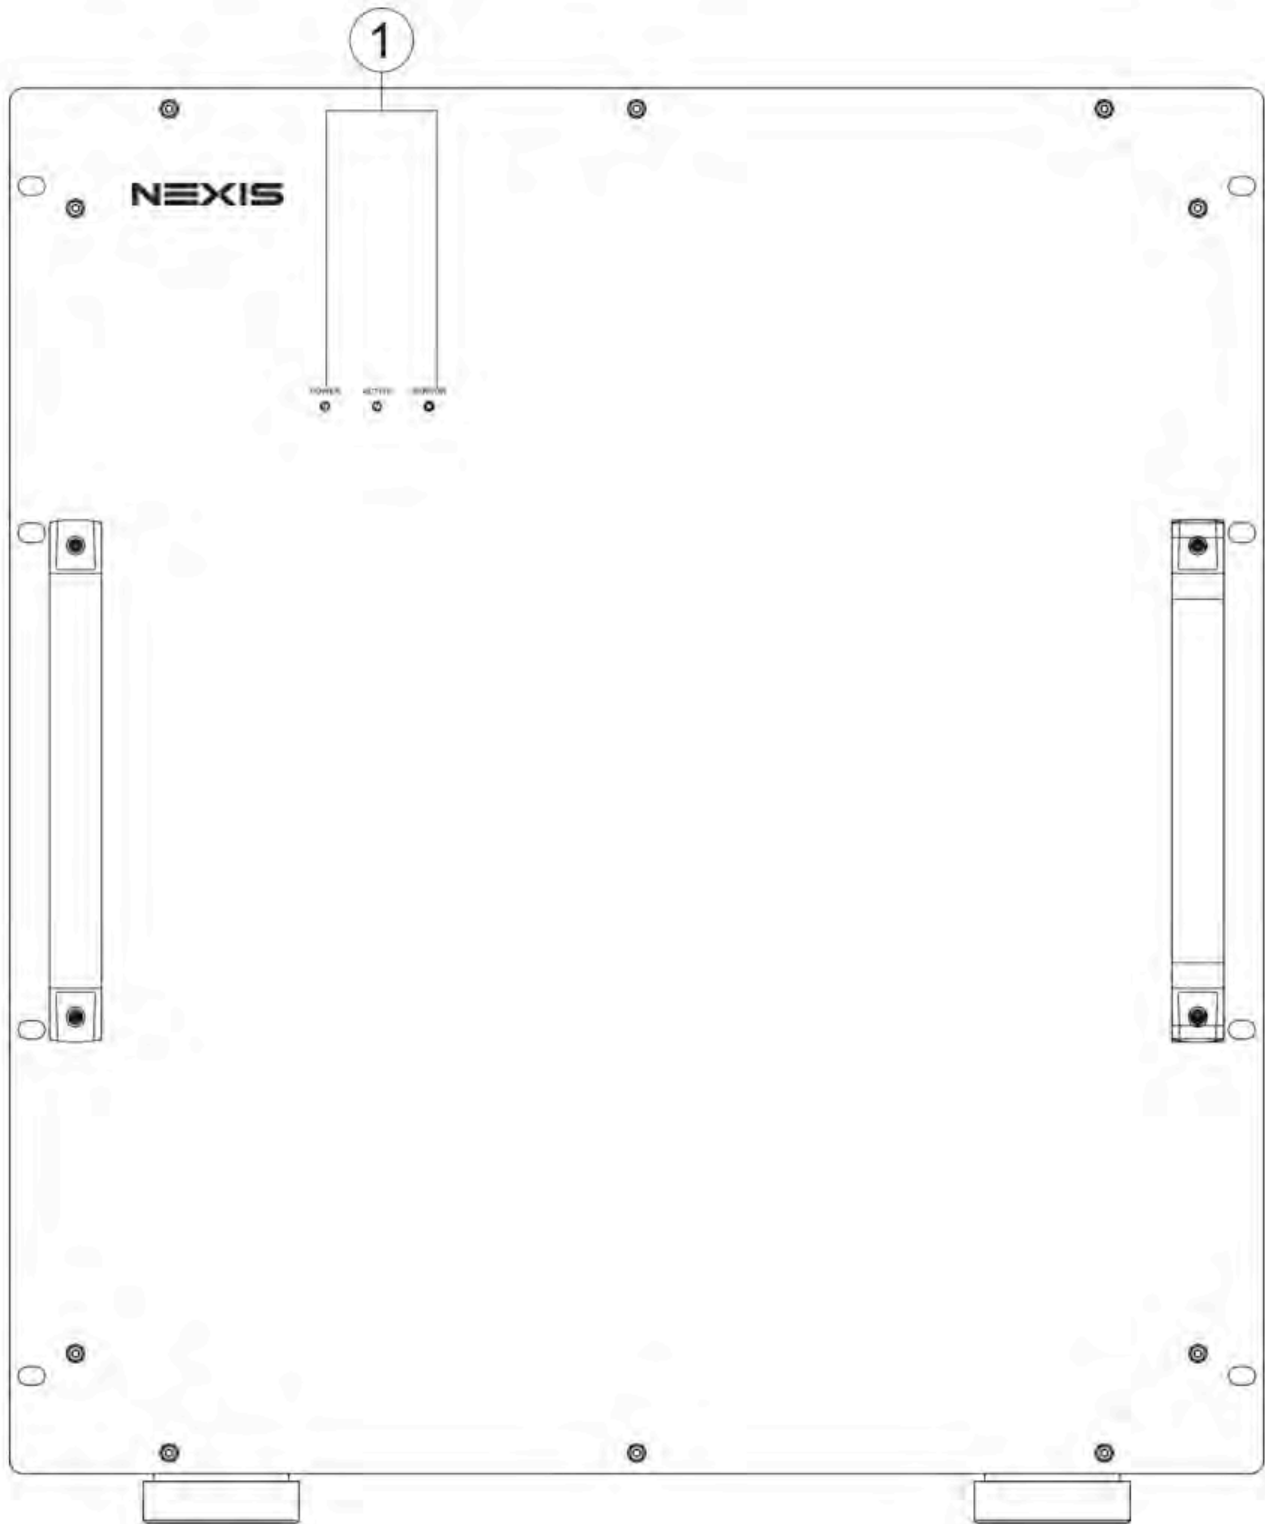

VW81272 Rear Panel :

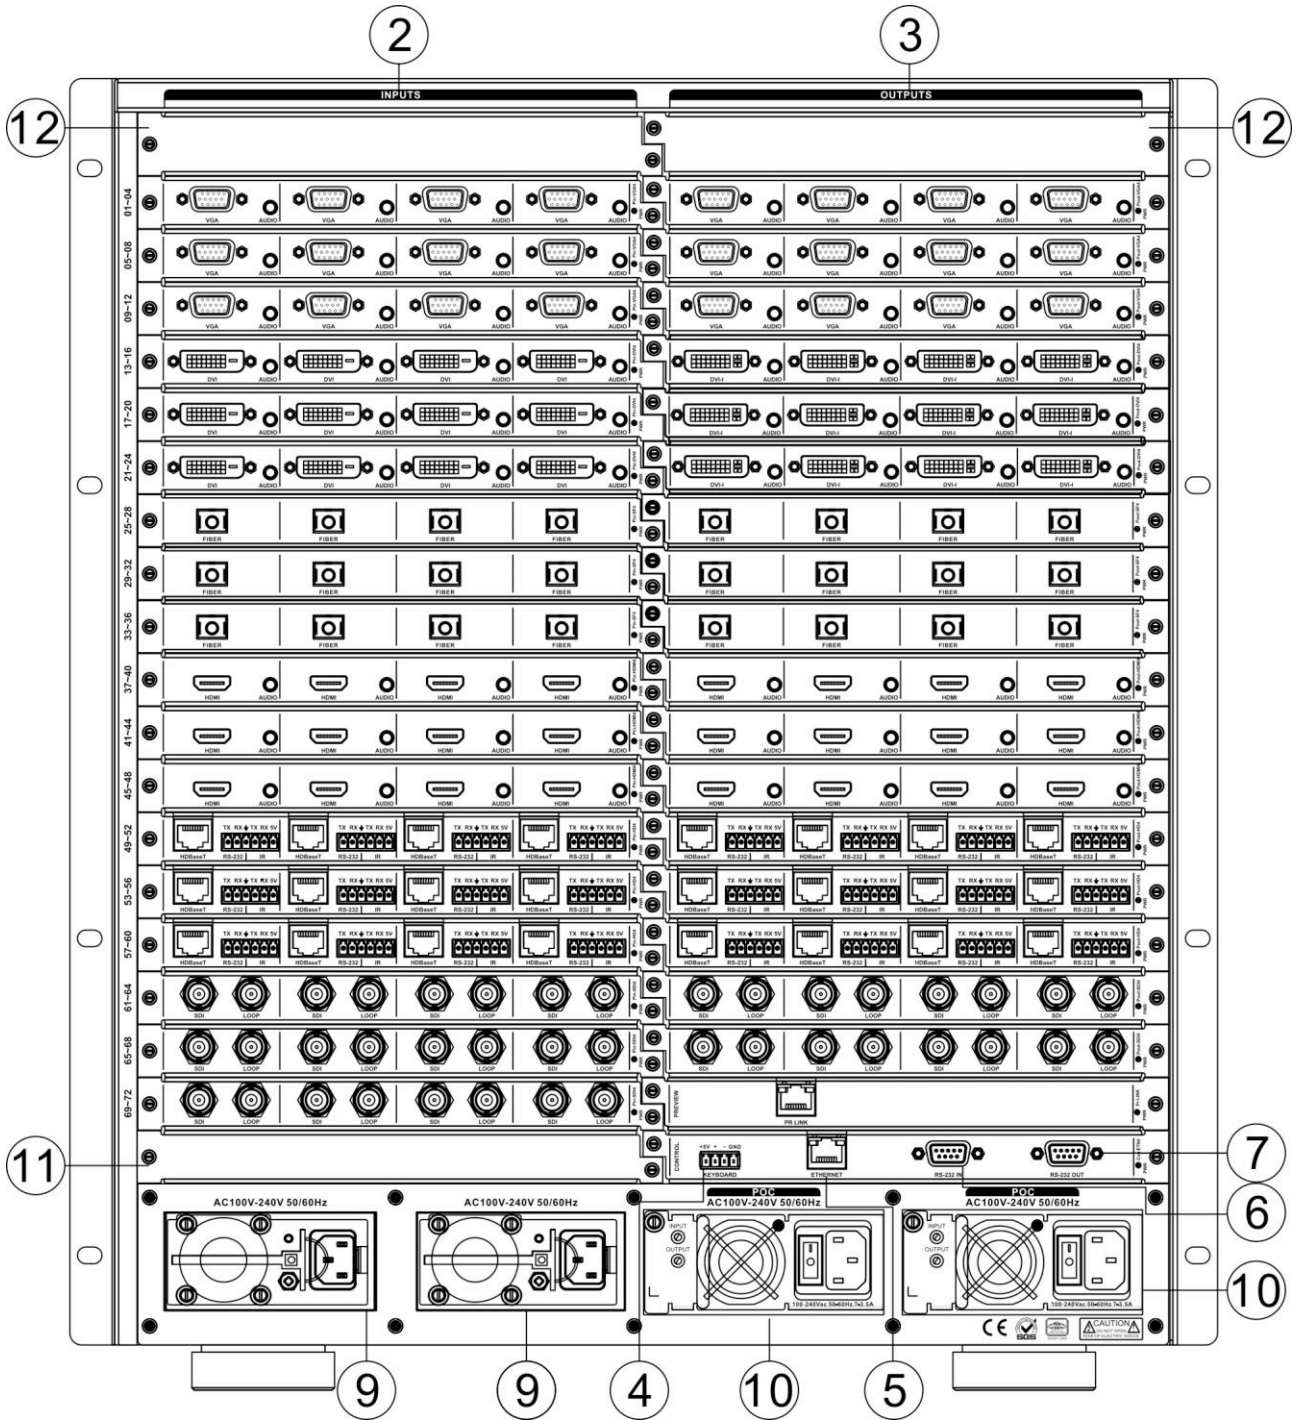

VW8144144 Panel : In same configuration manner with taller casing and I/O Slot

## 2.5 Link of matrix and peripherals

### 2.5.1 Input interface description

The input interface is composed of VW7604, VW7804, VW7514, VW7104, VW7404 and VW7704 input board, enable to combine various input signal formats arbitrarily.

### 2.5.2 Output interface description


The output interface is composed of VW8604, VW8804, VW8514, VW8704 stitching output board, enable to combine various input signal formats arbitrarily.

### 2.5.3 Control board communication port and link method

NEXIS modular matrix provides standard RS-232 serial communication ports, in addition to realize switching operations with infrared remote control, it can also control by using a variety of control systems (such as PC, NEXIS control systems, control systems of other manufacturers, etc.).

### 2.5.4 Matrix RS-232 control interface


Modular matrix provides two-way RS-232 serial interfaces (a DB9 female connector, a male DB9 connector), you can use this interface to control the matrix. Pin description of RS-232 port DB9 female connector is as follows:

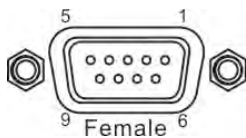

pin	signal	description
1	-	-
2	TXD	RS-232 protocol, sending data
3	RXD	RS-232 protocol, receiving data
4	-	-
5	GND	Signal ground
6	-	-

7	-	-
8	-	-
9	-	-


Pin description of RS-232 port DB9 male connector is as follows:

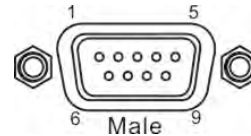

pin	signal	description
1	-	-
2	RXD	RS-232 protocol, sending data
3	TXD	RS-232 protocol, receiving data
4	-	-
5	GND	Signal ground
6	-	-
7	-	-
8	-	-
9	-	-

### 2.5.5 Link of matrix and control computer

With RS232 cable to link the computer's serial communication port (COM1 or COM2) and the matrix cabinet's RS-232 communication port, and use control command to control. For more details, refer to *Chapter five, Instructions*.

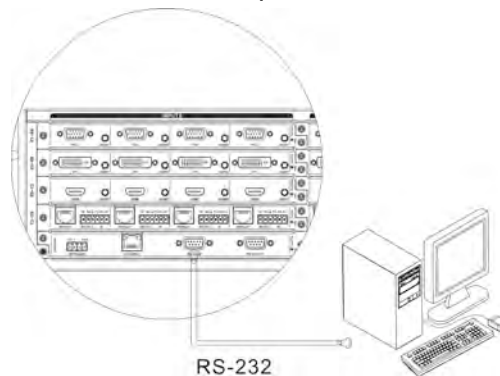

### 2.5.6 Matrix KEYBOARD interface

The matrix provides one-way KEYBOARD interface, it is used to link with extended keyboard




VIS-MKB100 so that you can switch the channels of the matrix. KEYBOARD is a four-foot 3.8mm phoenix interface, its pin description is as follows:

pin	signal	description
1	+5V	Output DC5V/1A, enable to provide power for MKB100
2	+	RS-485 protocol, DATA+
3	-	RS-485 protocol, DATA-
4	GND	Signal ground

### 2.5.7 Link of matrix and extended keyboard

Based on screen printing, correspondingly connect matrix cabinet KEYBOARD interface with extended keyboard VIS-MKB100's MATRIX interface, then you can control the matrix. For more details, refer to User's Manual of MKB100 Matrix Keyboard.

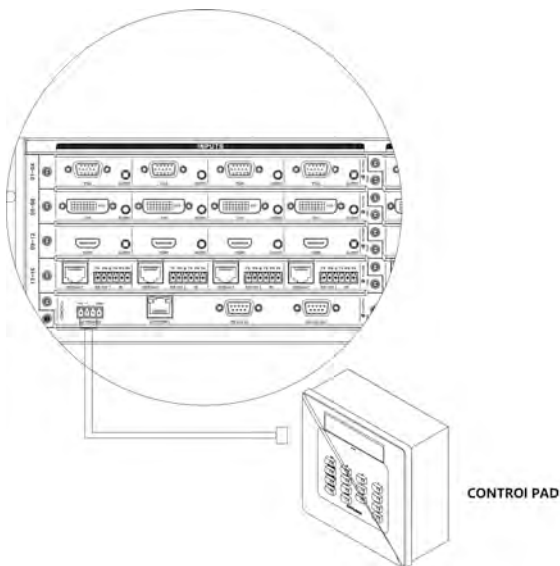


### 2.5.8 Matrix Ethernet Interface

#### 2.5.8.1 Hardware linking method

There are two ways to link matrix with Ethernet adapter hardware

- 1) cross-connect method  
Matrix and control computer is directly connected via CAT5 crossover cable.

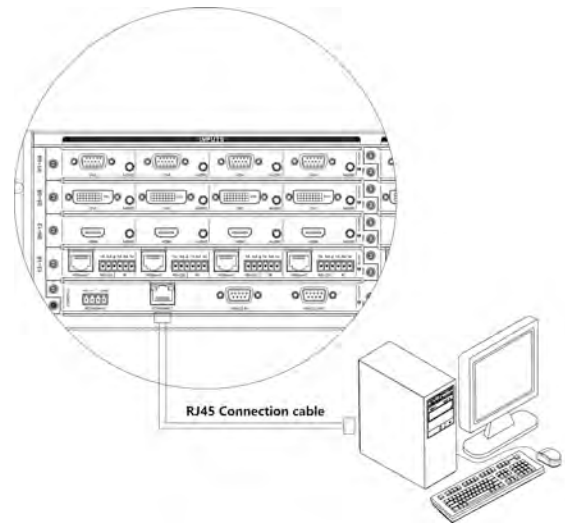


- 2) through-connect method  
Matrix and Ethernet switchboard or concentrator is connected via CAT-5 straight-through cable.

#### 2.5.8.2 Connection Method Description of RJ45 Ethernet Port straight-through Line and Cross-line

The system adopts CAT-5 (super 5-type line) as wires, using RJ-45 connector (commonly known as crystal head) of CAT-5 to connect network devices. Standard twisted-pair connection method is specifically regulated, aiming to ensure the symmetry of cable connector layout so that the interference between the cables within the connector can be offset. Super 5-type line in general has four pairs of wires twisted together, with different colors.

There are two ways to connect twisted pair: EIA / TIA 568B standard and EIA / TIA 568A standard.

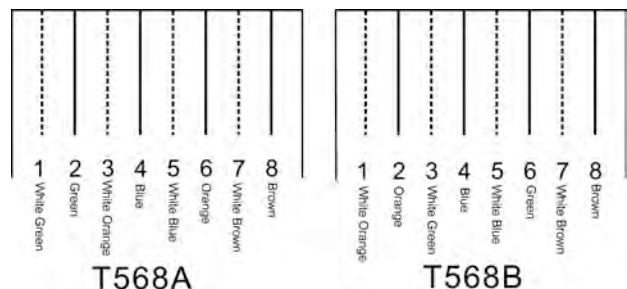

T568A line order							
1	2	3	4	5	6	7	8
White Green	Green	White Orange	Blue	White Blue	Orange	White Brown	Brown

T568B line order							
1	2	3	4	5	6	7	8
White Orange	Orange	White Green	Blue	White Blue	Green	White Brown	Brown


Straight-through line: both ends are connected in T568B line order.

Crossover line: one end is connected in T568A line order, the other end is connected in T568B line order.

### 2.5.9 HDMI port description

HDMI-A Type Line description:

Users can connect a variety of computer signals, audio and video signal equipments, such as DVD players, desktop computers, graphics workstations, and number displays in different occasions, output terminals can be connected to the projector, VCRs, computer monitors, amplifiers and so on.

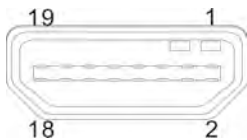


PIN	Function
1	TMDS Data2+
2	TMDS Data2 Shield
3	TMDS Data2-
4	TMDS Data1+

5	TMDS Data1 Shield
6	TMDS Data1-
7	TMDS Data0+
8	TMDS Data0 Shield
9	TMDS Data0-
10	TMDS Clock+
11	TMDS Clock Shield
12	TMDS Clock-
13	CEC
14	Reserved (in cable but N.C. on device)
15	SCL
16	SDA
17	DDC/CEC Ground
18	+5V Power
19	Hot Plug Detect

### 2.5.10 DVI port description


DVI-D Dual Link interface description

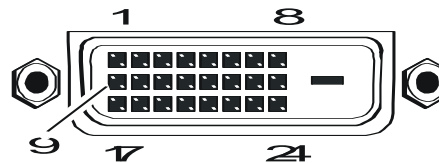

PIN	Function
1	T.M.D.S.Data2-
2	T.M.D.S.Data2+
3	T.M.D.S. Data 2/4 Shield
4	T.M.D.S. Data 4-
5	T.M.D.S. Data 4+
6	DDC Clock
7	DDC Data
8	No Connect
9	T.M.D.S.Data1-
10	T.M.D.S.Data1+
11	T.M.D.S.Data1/3 Shield
12	T.M.D.S.Data3-
13	T.M.D.S.Data3+
14	+5V Power
15	Ground (for +5V)
16	Hot Plug Detect
17	T.M.D.S. Data 0-
18	T.M.D.S. Data 0+
19	T.M.D.S. Data 0/5 Shield

20	T.M.D.S.Data5-
21	T.M.D.S.Data5+
22	T.M.D.S. Clock Shield
23	T.M.D. S. Clock +
24	T.M.D.S .Clock-

**2.5.11 DB15 interface description**

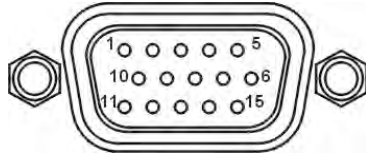

Pin description of component video DB15 port is as follows:

PI N	VGA	Compo nent	S-Vide o	Composi te
1	RED	Pr	N/C	N/C
2	GREEN	Y	N/C	N/C
3	BLUE	Pb	N/C	N/C
4	ID2	N/C	N/C	CVBS
5	GND	GND	N/C	GND
6	GND	GND	GND	N/C
7	GND	GND	GND	N/C
8	GND	N/C	N/C	N/C
9	N/C	N/C	Y	N/C
10	GND	N/C	N/C	N/C
11	N/C	N/C	C	N/C
12	SDA	N/C	N/C	N/C
13	HSYNC	N/C	N/C	N/C
14	VSYNC	N/C	N/C	N/C
15	SCL	N/C	N/C	N/C

Pin description of VGA video output board is as follows:


pin	signal	description
1	RED	red primary
2	GREEN	green primary
3	BLUE	blue primary
4	ID2	address code 2
5	GND	ground
6	RGND	red ground
7	GGND	green ground
8	BGND	blue ground
9	KEY	reserved
10	SGND	digital ground
11	ID0	address code 0
12	SDA	data pin
13	HSYNC	horizontal synchronization
14	VSYNC	vertical synchronization
15	SCL	clock signal


**2.5.12 DB15 male socket transfer cable(S terminal, RCA head)**





**2.5.13 DB15 male socket transfer cable definition**

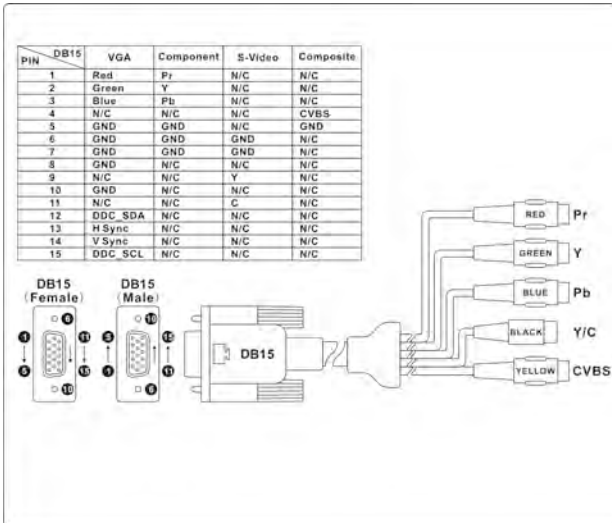

 VGA input board of matrix supports the input of analog, composite video and component video; VGA output board supports the output of analog, composite video and component video. If users need input or output component video signal, they need connect DB15 male socket transfer cable(S terminal, RCA head). The two kinds of connection are different, two things should be noticed:


1. the connection of VGA input board: support VGA, CVBS and YPbPr signal; when CVBS and YPbPr signal are needed, only three lines of DB15 male socket transfer cable terminal are useful. As shown above, the connection of YPbPr signal is Y attached to green line, Pb attached to blue line, Pr attached to red line; For CVBS signal, green line is the right one, signals can be recognized automatically, no setting is needed (VGA input port can access three signals, but one port can only attach to one signal a time).
2. the connection of VGA output board: support VGA, CVBS and YPbPr signal; when CVBS and YPbPr signal are needed, four lines of DB15 male socket transfer cable terminal are useful. As shown above, the connection of YPbPr signal is Y attached to green line, Pb attached to blue line, Pr attached to red line; For CVBS signal, only yellow line is the right one. VGA or YPbPr signal output requires instruction setting; CVBS output has always been on, no setting is needed.

# Chapter Three Control Panel Operating Instructions


## 3.1 Panel description

### 3.1.1 VW8208 panel

VW8208 front panel:

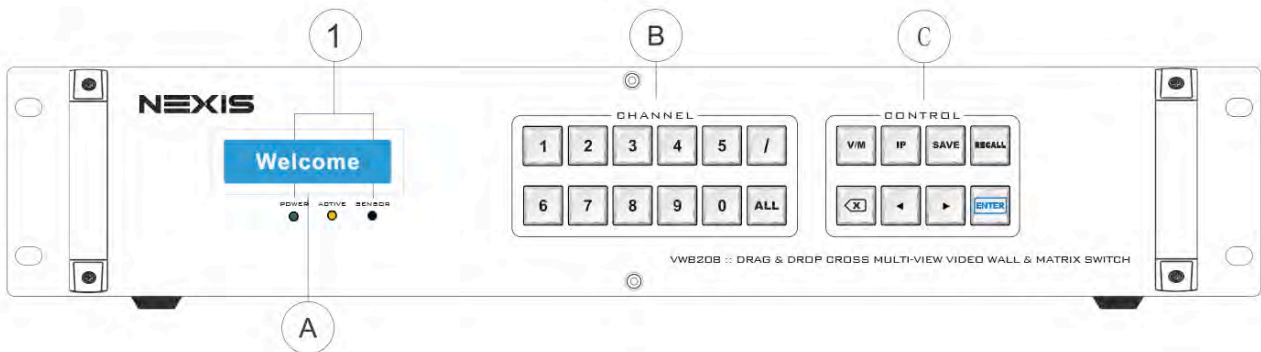


VW8208 back panel:

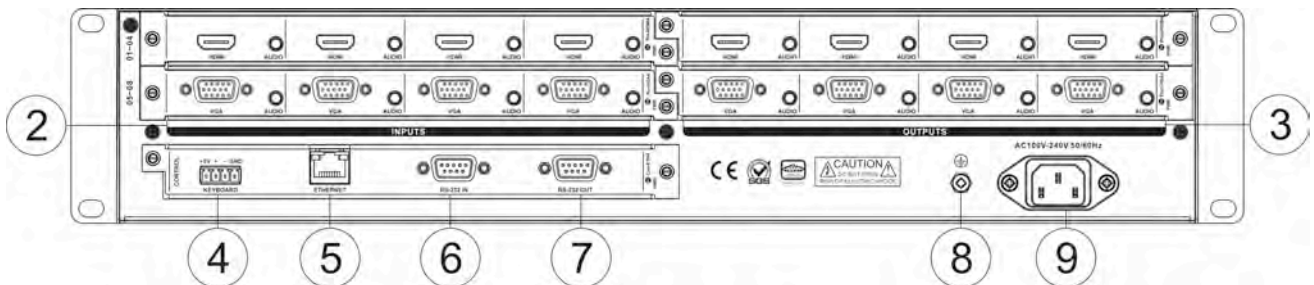


### 3.1.2 VW8316 panel

VW8316 front panel:

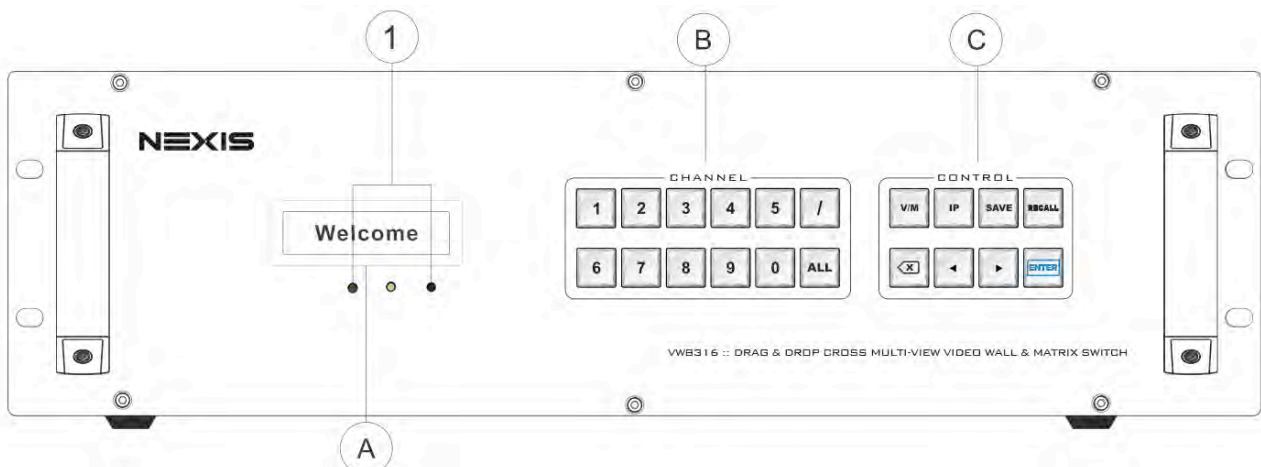


VW8316 back panel:

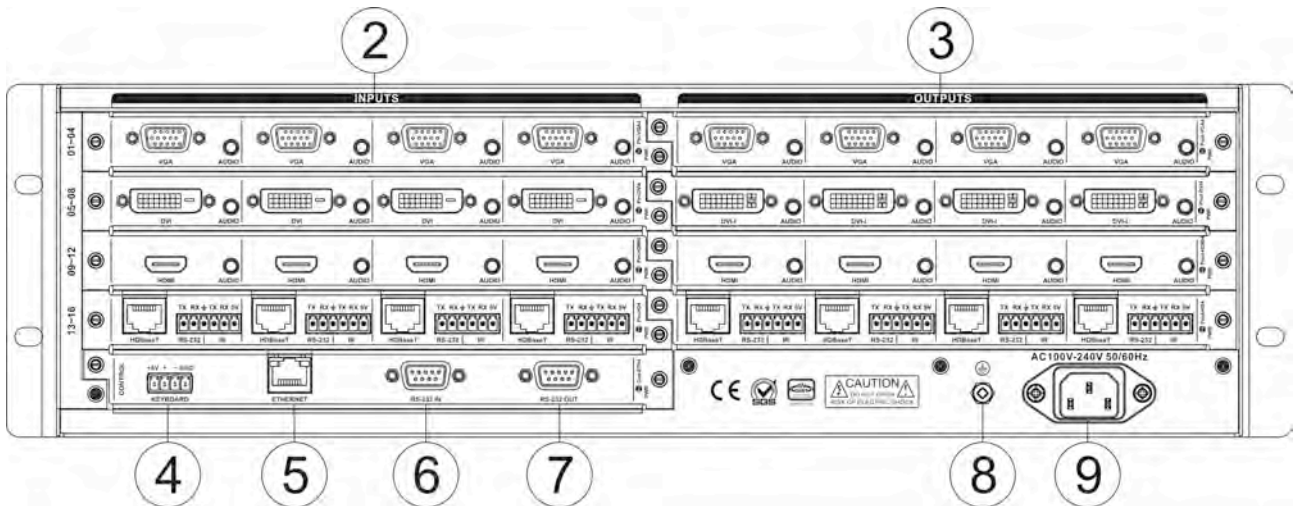


### 3.1.3 VW8736 panel

VW8736 front panel:

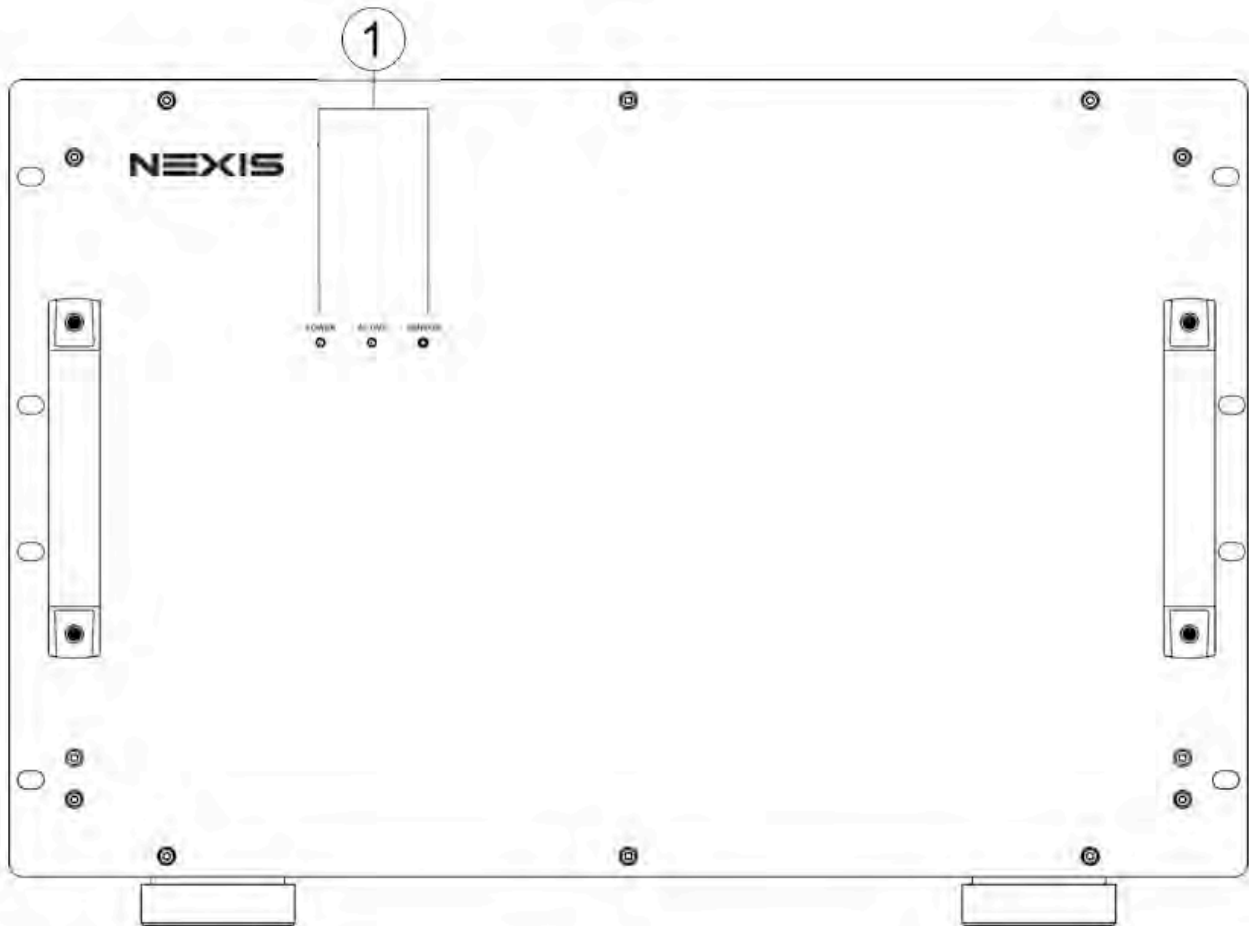


VW8736 back panel:

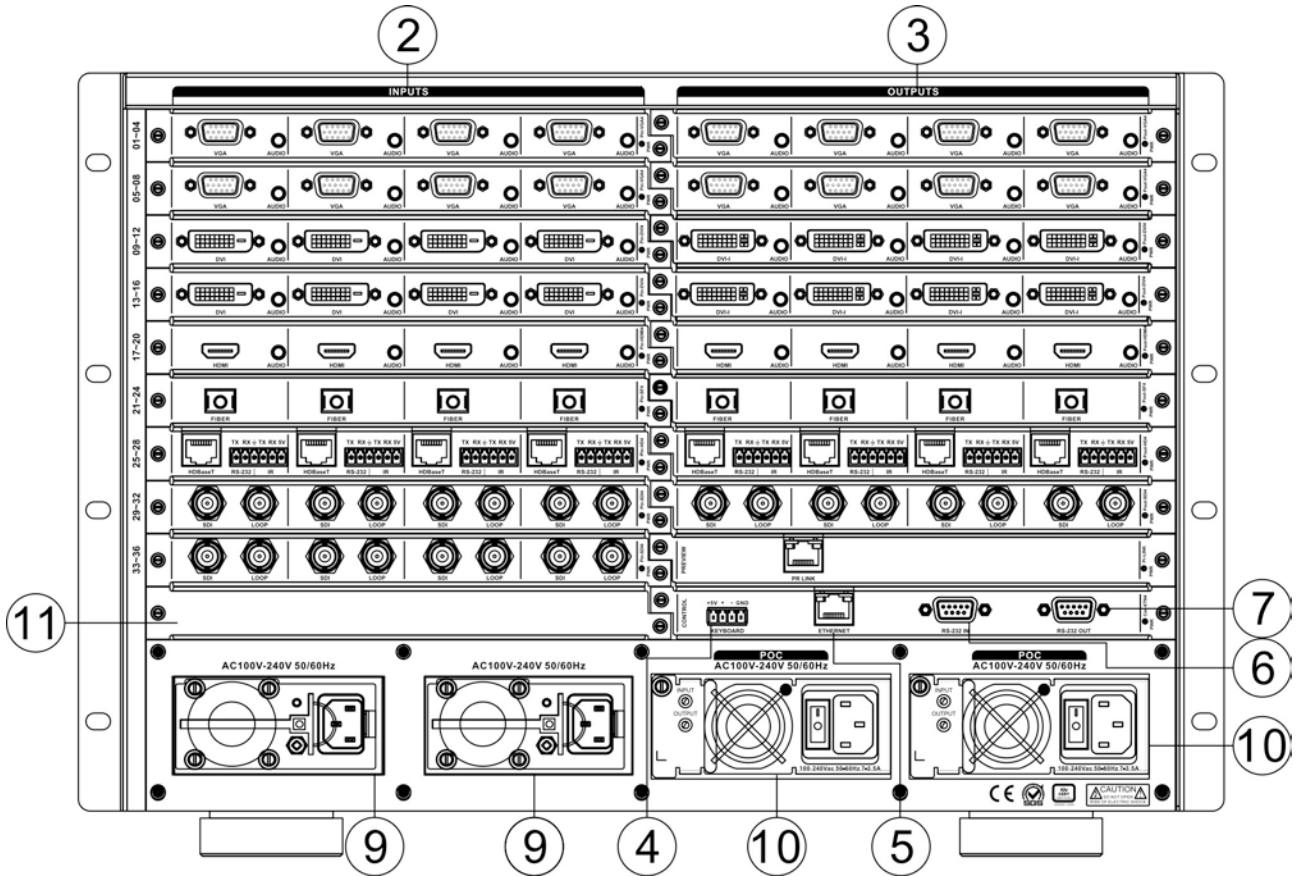


### 3.1.4 VW81272 Panel

VW81272 front panel:

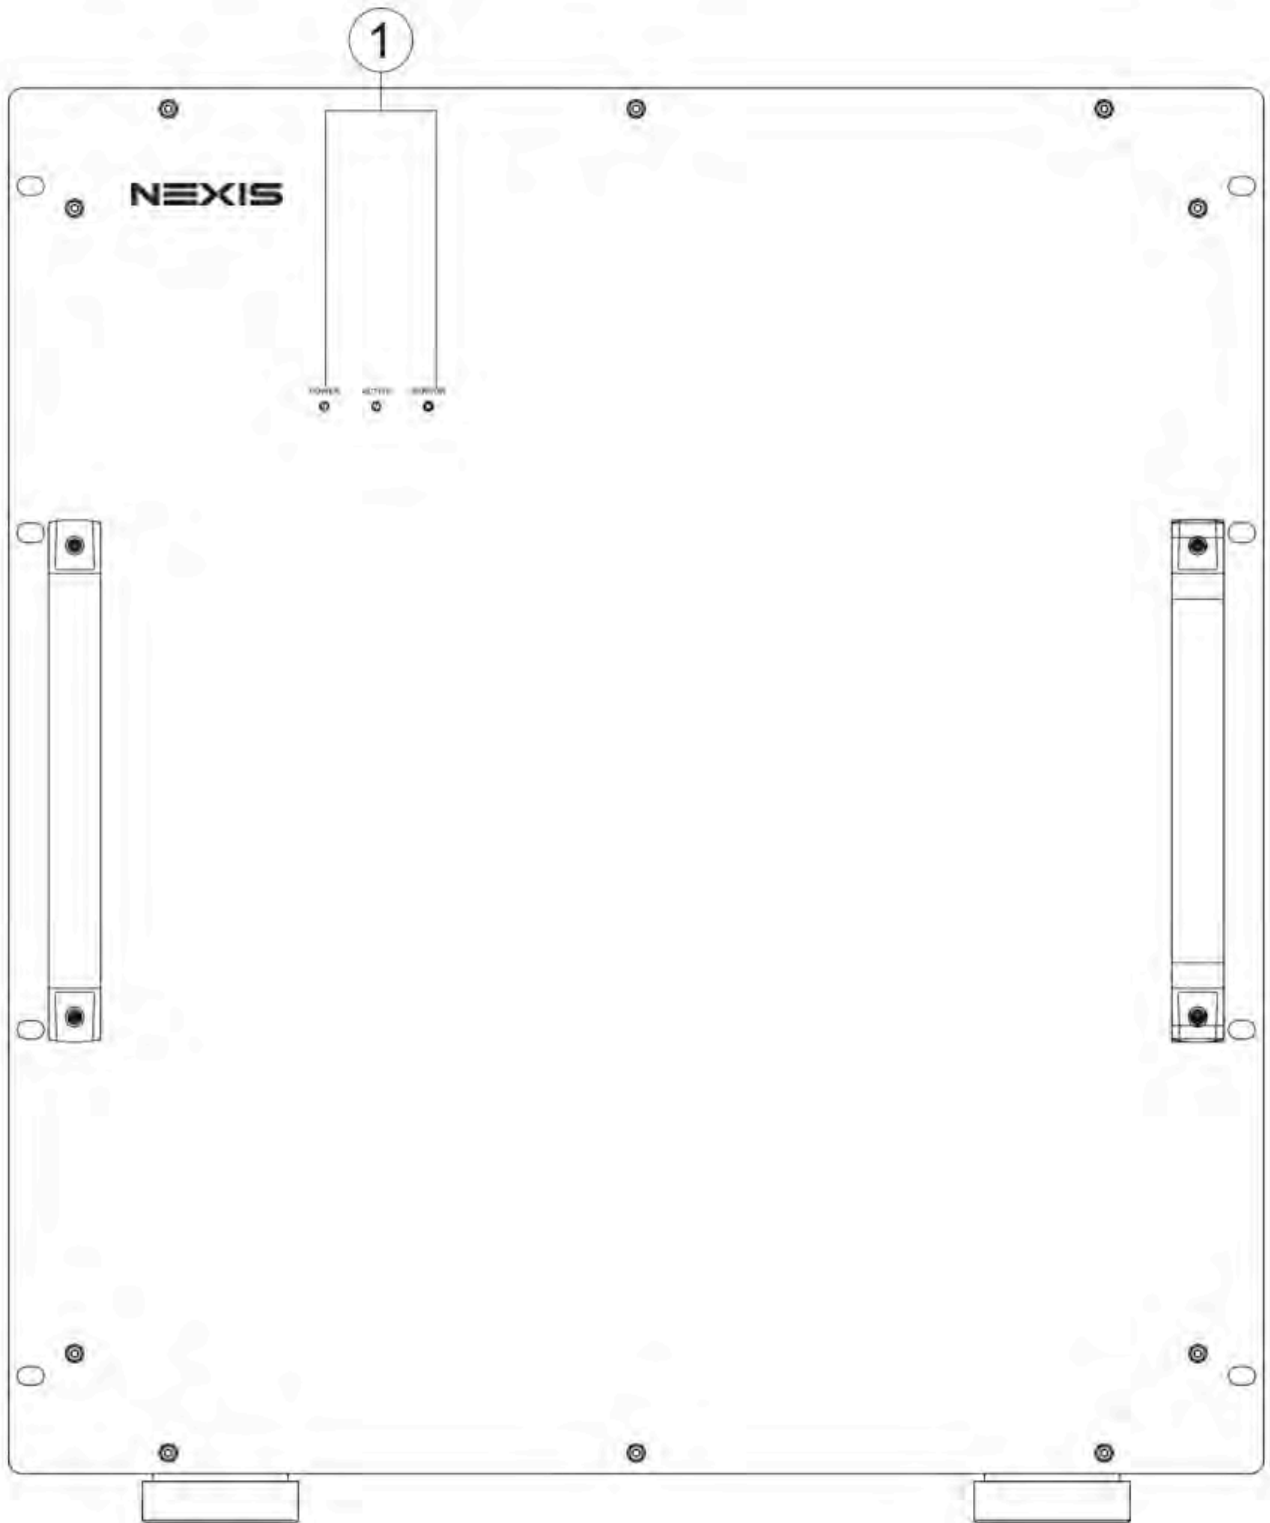

VW81272 back panel:

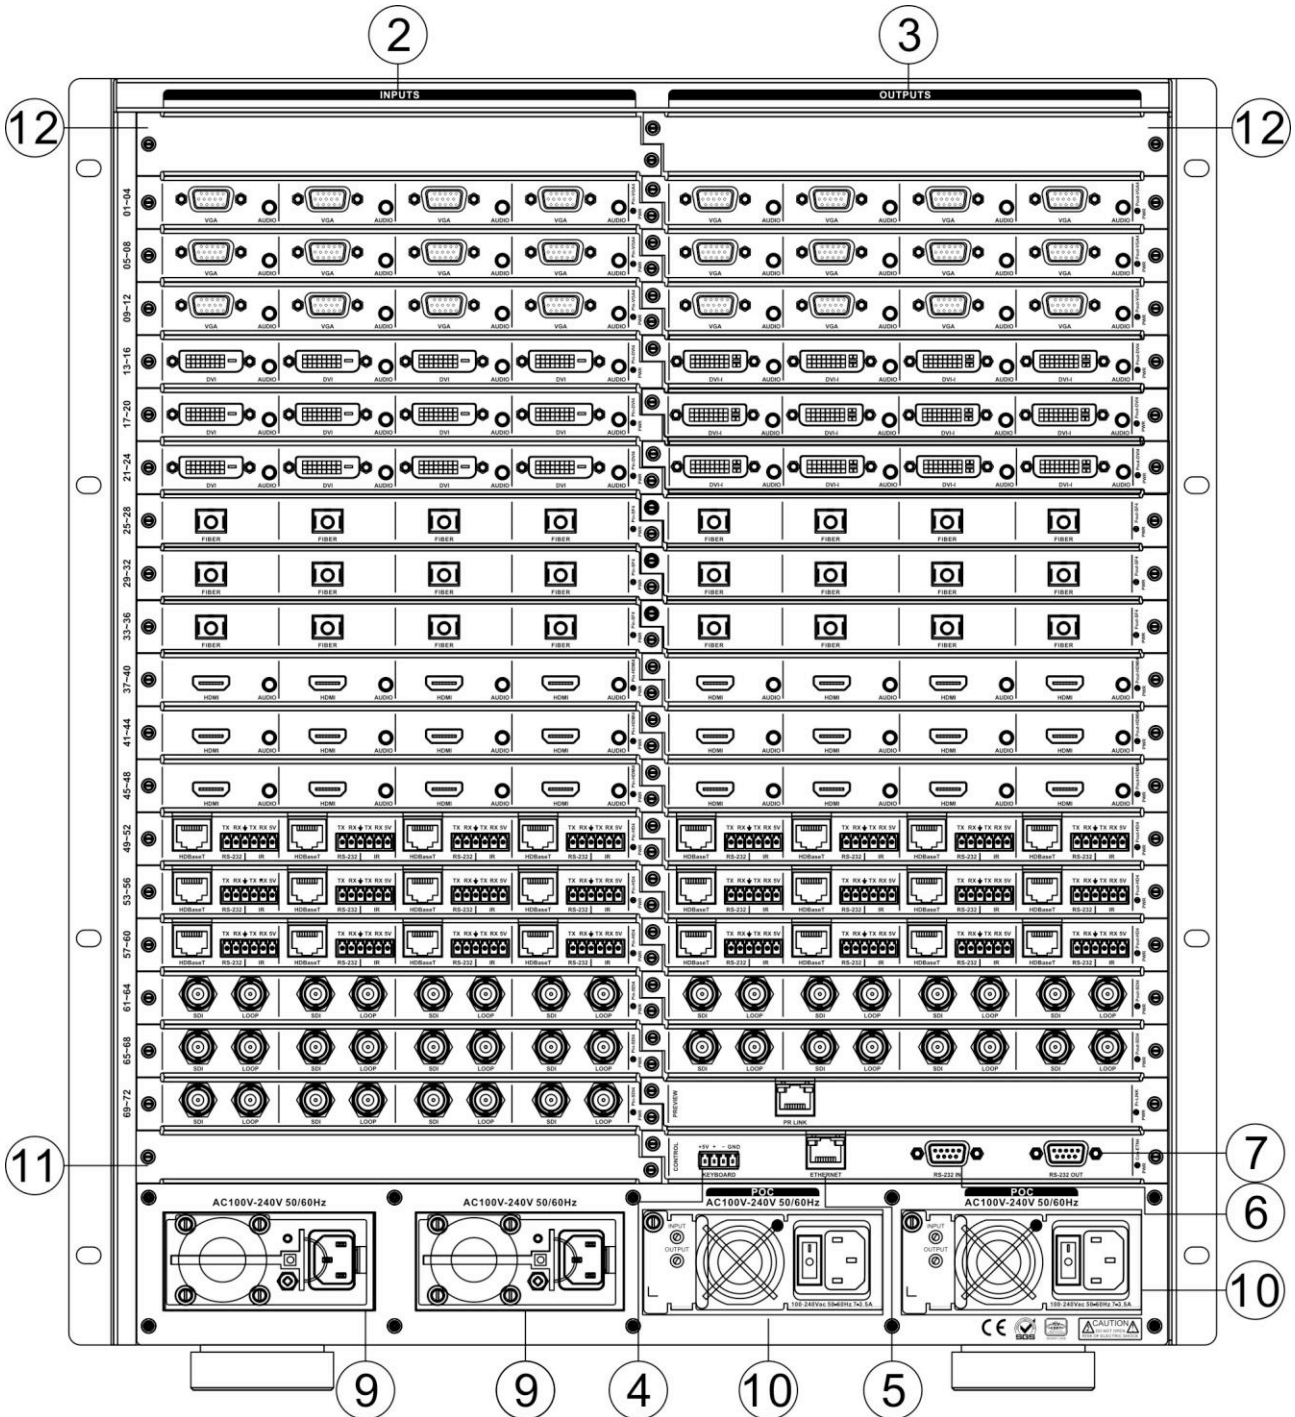

- ① **POWER:** power light  
**ACTIVE:** state light of receiving commands  
**SENSOR:** infrared receiving window

- ② **INPUTS : Signal input terminal**  
 Various boards are adopted as signals' input source, providing channel 8/16/36/72 input

terminals to connect corresponding input devices.

- ③ **OUTPUTS : Signal output terminal**  
 Various boards are adopted as signals' output source, providing channel 8/16/36/72 output terminals to connect corresponding output devices.

④ **KEYBOARD : Extended keyboard interface**

Channel 1 KEYBOARD interface, used together with MCP100 keyboard.

⑤ **ETHERNET : RJ45 Network interface**

Ethernet link interface can be used to link local area network, internet and so on. Green light indicates the link is normal, sparkling orange light indicates it is receiving or sending data.

⑥ **RS-232 IN : RS-232 serial port input**

Channel 1 independent RS-232 port (DB9 female socket) can be use to link PC or central control devices to control the system.

⑦ **RS-232 OUT : RS-232 serial port output**

Channel 1 independent RS-232 port (DB9 male socket) can be use to link PC or central control devices to control the system.

⑧ **Earthing rod**

⑨ **Power interface**

System power supports AC100~240V 50/60Hz input.

⑩ **POC power port**

System POC offers power to external devices, and is only applicable to HD boards of remote transmitters.

11 **Blank slot**

The lowest position of VW8736 and VW81272 matrix's input board slot is blank, video board can not be used.

12 **Infrared serial port switching board slot**

It is used to access infrared serial port switching board. Accessing infrared R232 serial port extended switching port can transmit infrared signal or RS232 signal of HD, optical fiber and other input boards to output boards by setting instructions, and vice versa (output board -- input board). Only VW81272 has this slot (infrared switching board is VW81272's optional board)

A. **LCD display**

B. **CHANNEL** : Select the input/output channel to switch

C. **CONTROL** : Input the commands to switch, call profile, set IP etc operation.



name/model	Appearance
VW7804 HDMI seamless input board	
VW7604 DVI seamless input board	
VW7514 HDBaseT seamless input board	
VW7104 VGA seamless input board	
VW7404 SDI - VP8804SDI seamless input / output board	
VW7704 Optical fiber input board	
VW7002 RJ45 Input board	
VW8804 HDMI video wall output board	
VW8604 DVI video wall output board	
VW8514 HDBaseT video wall output board	
VW8704 Optical fiber video wall output board	
VW-PVW04 Preview board	
VW-CTN04 Control board	
VW-CTN05 Advanced control board	

### 3.2 Input boards

#### 3.2.1 VW7804 HDMI Input board function features

- ◆ Four-way HDMI-A interface, 3.5 audio base;
- ◆ Maximum transmission distance can reach 35 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio, support HDMI embedded audio be input selectively;
- ◆ Support EDID reading function;

- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Maximum supported resolution:  
HDPC: 1920x1200P@60;  
HDTV: 1920x1080P@60.

#### 3.2.2 VW7604 DVI Input board function features

- ◆ Four-way DVI-D interface, 3.5 audio base;
- ◆ Maximum transmission distance can reach



35 meters;

- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio input;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Maximum supported resolution:  
HDPC: 1920x1200P@60;  
HDTV: 1920x1080P@60.

### 3.2.3 VW7514 HDBaseT twisted pair input board function features

- ◆ Four-way high-speed RJ45 interface, four-way 6PIN phoenix interface;
- ◆ Maximum transmission distance via CAT5e/6 can reach 35 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support infrared serial input, combined with IO switch board, enable to realize infrared port switch;
- ◆ Support HDBaseT protocol;
- ◆ Support of providing power for external POC, matched with POC power, 3636 and its upgrades support this function;
- ◆ Maximum supported resolution:  
HDPC: 1920x1200P@60;  
HDTV: 1920x1080P@60.

### 3.2.4 VW7104 VGA Input board function features

- ◆ Four-way DB15 interface, 3.5 audio base;
- ◆ Support of inputting VGA, CVBS and YPbPr signal, input signal source can be recognized automatically;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio input;
- ◆ Maximum supported resolution:  
HDPC: 1920x1200P@60;  
HDTV: 1920x1080P@60.



**Only when external video is input at VGA interface, VGA input board's 3.5mm audio port will receive audio signal.**

### 3.2.5 VW7404 SDI Input board function features - VP8804SDI (Output version)

- ◆ Four-way BNC female interface, four-way BNC female interface looping out;
- ◆ Support hot plugging;
- ◆ Support HD/3G SDI signal.

### 3.2.6 VW7704 Optical fiber input board function features

- ◆ Four-way single-core optical fiber input;
- ◆ Support hot plugging;
- ◆ Transmission distance with the aid of optical fiber transmitter can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Using IO switch board enables to realize infrared port switch;
- ◆ Maximum supported resolution:  
HDPC: 1920x1200P@60;  
HDTV: 1920x1080P@60.

### 3.2.7 VW7002 RJ45 Input card functions and features

- ◆ 2 channels high speed RJ45 interfaces;
- ◆ Maximal output distance with CAT5e/6 cable 100 M;
- ◆ Support web logging in to configure the network protocol, LAN parameters, and Remote Network parameters, etc.;
- ◆ HDTV: 1920x1080P@60.

**Note: The IP address of the connected IP camera and the interface's local IP address should be within the same network segment.**

### 3.3 Output boards

#### 3.3.1 VW8804 HDMI stitching output board function features

- ◆ Four-way HDMI-A interface output, 3.5 audio base;
- ◆ Stitching function;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Four-way HDMI seamless output, maximum supported resolution is 1920\*1200@60HZ, with four-way independent audio output, enabling HDMI audio dividing;
- ◆ Single screen can open 2 windows; signals can overlay, roam and scale arbitrarily.

#### 3.3.2 VW8604 DVI switching output board function features

- ◆ Four-way DVI-I female interface output, 3.5 audio base;
- ◆ Stitching function;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support EDID reading function;
- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

#### 3.3.3 VW8514 HDBaseT twisted pair stitching output board function features

- ◆ Four-way high-speed RJ45 interface output, four-way 6PIN phoenix interface;
- ◆ Stitching function;
- ◆ Maximum transmission distance via CAT5e/6 can reach 100 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support infrared serial output, combined with

IO switch board, enable to realize infrared port switch;

- ◆ Support EDID reading function;
- ◆ Support HDBaseT protocol;
- ◆ Support of providing power for external POC, matched with POC power, 3636 and its upgrades support this function;
- ◆ Support four-way twisted pair seamless output, support RS232 on the board, IR interface;
- ◆ Single screen can open 2 windows; signals can overlay, roam and scale arbitrarily.

#### 3.3.4 VW8704 Optical fiber stitching output board function features

- ◆ Four-way single-core optical fiber output;
- ◆ Stitching function;
- ◆ Support hot plugging;
- ◆ Transmission distance with the aid of optical fiber transmitter can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Using IO switch board enables to realize infrared port switch;
- ◆ Support four-way single-core optical fiber seamless output, maximum supported resolution is 1920\*1200@60HZ; transmission distance with the aid of VIS-USFCOMP900R can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Single screen can open 2 windows; signals can overlay, roam and scale arbitrarily.

### 3.4 Preview boards

#### 3.4.1 VW-PVW04 Preview board function features

- ◆ One RJ45 interface preview output, you can simultaneously view four-way video packet information or automatic round robin;

- ◆ each way supported video resolution:
  - 1280x720@30fps;
  - 800x600@30fps;
  - 640x480@30fps;
  - 352x288@30fps;
- ◆ applied H.264 JPEG multi-stream coding, supported frame rate is 1/16 ~ 60fps;
- ◆ Support hot plugging;
- ◆ Support control video switching by preview.

## 3.5 Control boards

### 3.5.1 VW-CTN04 Control board function features

- ◆ Two DB9 fully functional serial ports, enabling to control multiple peripherals, to receive commands and to forward data;
- ◆ One RJ45 interface can attach to PC software off board, enabling to control, query devices and so on;
- ◆ One 4P phoenix-head keyboard interface can attach to keyboards off board, enabling

to control devices;

- ◆ Support hot plugging.

### 3.5.2 VW-CTN05 Advanced control board function features

- ◆ Two DB9 fully functional serial ports, enabling to control multiple peripherals and to receive commands;
- ◆ One RJ45 interface, enabling to download, upgrade controlled programming and to query information;
- ◆ One 4P phoenix-head keyboard interface, enabling to operate with keyboards;
- ◆ One 3P phoenix-head serial port, enabling to output debugging and to receive commands;
- ◆ Support hot plugging;
- ◆ Support controlled programming.

### 3.6 specifications and technical parameters

Model	VW7804
<b>Specifications</b>	
<b>Protocol</b>	
HDMI1.3a, HDCP1.3protocol, DVI1.0 protocol;	
<b>Video</b>	
Gain	0dB
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60, 1280x800@60, 1280x960@60, 1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1080@25,1920x1080P@30,1920x1200P@60,1920x1080P@60,1920x1080i@50,1920X1080i@60
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way HDMI-A interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	Default EDID and reading function
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 35 meters with 1600x1200@60 ( recommend to use certified HDMI dedicated wires, such as Molex TM wire)
Product weight	About 0.5KG
Maximum consumption	15W

Model	VW7604
<b>Specifications</b>	
Protocol	
DVI1.0 protocol	
Video	
Gain	0dB
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920x1080P@60, 1920x1080i@50,1920X1080i@60;
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way DVI-D female interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	Default EDID and reading function
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 35 meters with 1600x1200@60 ( recommend to use certified HDMI dedicated wires, such as Molex TM wire)
Product weight	About 0.5KG
Maximum consumption	15W

Model	VW7514
<b>Specifications</b>	
Link input/output	
Interface	Four-way high-speed base and four-way 6PIN phoenix base
Supported protocol	HDBaseT protocol
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920x1080P@60,1920x1080i@50,1920X1080i@60;
Signal type	High-speed differential signal defined in HDBaseT protocol
Cable transmission power	POC power supply (+48V), it should be used with our company CAT5 series transmitter which can provide power supply via cables.
Impedance	50 $\Omega$
EDID	Default EDID
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 100 meters with 1600x1200@60 ( recommend to use NEXANS CAT5e/6 dedicated wires)
Product weight	About 0.5KG
Maximum consumption	27W

<b>Model</b>		<b>VW7104</b>
<b>Specifications</b>		
Interface		DB15 interface, 3.5mm audio base
Supported resolution	Composite video CV	Input board: 480i/NTSC,576i/PAL Output board: 480i/NTSC,576i/PAL
	Component video YPbPr	Input board:480i/NTSC,480P/NTSC,576i/PAL,576P/PAL,1280x720@50,1280x720@60,1920x1080i@50,1920X1080P@60; Output board: 1280x720@60,1920X1080P@60;
	VGA video	Input board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1360x1024@60,1366x768@60,1440x900@60,1400x1050@60,1600x900@60,1600x1200@60,1680x1050@60,1920X1080P@60; Output board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60;
Gain		0dB
Bandwidth		150MHz @ -3dB
Differential phase error		0.1°,3.58-4.43 MHz
Differential gain error		0.1% , 3.58-4.43 MHz
Signal strength		1V p-p :composite video (CVBS)
Minimum/maximum level		Analog signal: -2V/+2V
Impedance		75 Ω
Return loss		<-30dB@5MHz
Product weight		About 0.5KG
Maximum consumption		20W

<b>Model</b>		<b>VW7404</b>
<b>Specifications</b>		
Interface		Four-way BNC input/output, four-way BNC looping out
Supported protocol		SMPTE 425M, SMPTE 424M,SMPTE 292M,SMPTE 259M-C,DVB-ASI
Pixel bandwidth		2.970Gb/s, 1.485Gb/s, 270Mb/s,
Supported resolution		1920x1080@25,1920x1080P@30,1280x720@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Supported format		HD-SDI 3G-SDI
Product weight		About 0.5KG
Maximum consumption		20W

Model	VW7704
<b>Specifications</b>	
Interface	Four-way high-speed single-core SC optical fiber interface
<b>Video</b>	
Optical fiber interface	SC connector
Optical fiber type	Multimode/Single Mode(optional)
Wavelength	Multimode 850nm/Single Mode: 1310 –1620nm(optional)
Interface bandwidth	Forward: 6.25Gbps, reverse: 3.125Gbps
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Suggested maximum input transmission distance	OM3 multimode optical fiber: <300 meters, single mode optical fiber: 2~20kilometers, 1920x1080p@60
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Product weight	About 0.5KG
Maximum consumption	20W

Model	VW7002
<b>Specifications</b>	
<b>Protocol</b>	
RTP, RTCP, RTSP, TCP, UDP RTSP, UDP	
<b>Video</b>	
Transmission distance	100m
Compression technolgoy	H264.
Max.Delay Time	100ms
Default IP	192.168.1.180
Network Bandwidth	100M
Max. Resolution	1920x1200
Fall time	<0.3Tbit (20%--80%)
Weight	0.5kg
Consumption	25W



Model	VW8804
<b>Specifications</b>	
Protocol	
HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol.	
Video	
Gain	0dB
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1080@25,1920x1080P@30,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way HDMI-A interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 7 meters with 1600x1200@60 ( recommend to use HDMI dedicated wires, such as Molex TM wire )
Product weight	About 0.5KG
Maximum consumption	15W

Model	VW8604
<b>specifications</b>	
<b>Protocol</b>	
DVI1.0 protocol	
<b>Video</b>	
Gain	0dB
Pixel bandwidth	165MHz, all-digital or analog
Interface bandwidth	2.25Gbps all-digital or 350MHz analog
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way DVI-I interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 7 meters with 1600x1200@60 (recommend to use DVI dedicated wires, such as Molex TM wire )
Product weight	About 0.5KG
Maximum consumption	15W

Model	VW8514
<b>Specifications</b>	
Link input/output	
Interface	High-speed RJ45 base and 6PIN phoenix base
Video	
Supported protocol	HDBaseT protocol
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Signal type	High-speed differential signal defined in HDBaseT protocol
Cable transmission power	POC power supply (+48V), it should be used with our company CAT5 series transmitter which can provide power supply via cables.
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 100 meters with 1600x1200@60 (recommend to use NEXANS CAT5e/6 dedicated wires )
Product weight	About 0.5KG
Maximum consumption	22W

Model	VW8704
<b>Specifications</b>	
Interface	Four-way high-speed single-core SC optical fiber interface
Video	
Optical fiber interface	SC connector
Optical fiber type	Multimode/Single Mode(optional)
Wavelength	Multimode 850nm/Single Mode: 1310 –1620nm(optional)
Interface bandwidth	Forward: 6.25Gbps, reverse: 3.125Gbps
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Suggested maximum input/output transmission distance	OM3 multimode optical fiber: < 300 meters, single mode: 2~20 kilometers, 1920x1080p@60
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x800@60,1280x1024@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60;
Product weight	About 0.5KG
Maximum consumption	20W

## Chassis Specifications

Model	VW8208	VW8316	VW8736	VW81272	VW8144144
<b>Specifications</b>					
<b>Interface</b>					
Number of input boards/input channels	2/8	4/16	9/36	18/72	36/144
Number of output boards/output channels	2/8	4/16	9/36	18/72	36/144
Supported input board type	VW7804; VW7604; VW7514; VW7104; VW7704; VW7404 (Next Page)				
Supported stitching output board type	VW8804; VW8604; VW8514; VW8704 (Next Page)				
Interface bandwidth	6.75Gbps				
<b>Serial port control</b>					
Serial control interface	RS-232, 9 pin female D type interface and 9 pin male D type interface				
Baud rate and protocol	Baud rate: 9600-19200, data bits: 8 bits, stop bits: 1 bit, Parity: No				
Serial control interface structure	9 pin female D type interface : 2 = TX, 3 = RX, 5 = GND; 9 pin male D type interface : 2 = RX, 3 =TX, 5 = GND				
<b>KEYBOARD control interface</b>					
Keyboard control interface	Four-way 3.8mm phoenix interface				
Operation method	To use with extended keyboard MCP100				
Keyboard control interface structure	+5V=DC5V , + = DATA+, -=DATA- GND = signal ground				
<b>Ethernet control</b>					
Ethernet control interface	RJ-45 female interface				
Ethernet control protocol	TCP/IP				
Ethernet control speed rate	Adaptive 10M / 100M, full-duplex or half-duplex				
<b>Specifications</b>					
System power	100VAC ~ 240VAC, 50/60 Hz, International adaptive power				
Storage, work temperature	0 ~ +50°C				
Storage, work humidity	20% ~70%				
Chassis size	2U	3U	7U	12U	24U
Product weight ( without boards)	About 5Kg	About 7Kg	About 16Kg	About 29Kg	About 80Kg
Full power ( without boards)	About 18W		About 30W		About 70W
Size	445x400x88	445x400x132	445x400x310	445x400x532	483x400x1043
Mean time between failures	30,000 hours				

# Chapter Four Instructions

## 4.1 NEXIS Processor instructions

Serial port protocol: baud rate: 9600 - 19200, data bits: 8, stop bits: 1, parity bits: none

Ethernet: protocol: TCP, IP: 192.168.1.190, PORT: 6666

Meanings of instructions:

[X1], [X2]... [Xn] represents the corresponding input port;

[Y1], [Y2]... [Yn] represents the corresponding output port;

[TX1], [TX2]... [TXn] represents the corresponding input port's serial port/infrared transmitter channel;

[RX1], [RX2]... [RXn] represents the corresponding input port's serial port/infrared receiver channel; [TY1],

[TY2]... [TYn] represents the corresponding output port's serial port/infrared transmitter channel;

[RY1], [RY2]... [RYn] represents the corresponding output port's serial port/infrared receiver channel;

H represents Arabic numerals; n in the number of the corresponding model's input/output interface, such as VW81272, the maximum value of n is 72.



[ ] of [x] in the following instruction list is annotation, in practice, it should be removed.

For example, \$[x]AudioA! should be \$8AudioA! in practice.

Instructions ( pc-->VW)	Functions	Returned information	Examples
<b>System instructions</b>			
/:BellOff;	Close buzzer	<Closed The Bell.>	/:BellOff;
/:BellOn;	Open buzzer	<Opened The Bell.>	/:BellOn;
/:MessageOff;	Close serial port return, only few characters such as SWITCH or OK! is allowed	<Closed The Message Return.>	/:MessageOff;
/:MessageOn;	Open serial port return	<Enabled The Message Return.>	/:MessageOn;
/:HeartBeat;	PC software heartbeat	<HeartBeat>	/:HeartBeat;
\$Default!	Control board restore default(control board reset and restart)	None	\$Default!
\$(X1)DefaultIn!	Restore channel [X1] default input	<Set Succeed!>	\$1DefaultIn!
\$(Y1)DefaultOut!	Restore channel [Y1] default output	<Set Succeed!>	\$1DefaultOut!
\$AllDefaultIn!	Restore all default input	<Set Succeed!>	\$AllDefaultIn!
\$AllDefaultOut!	Restore all default output	<Set Succeed!>	\$AllDefaultOut!
Status [Y1].	Query channel [X1] output current status	V:[x1] -> [Y1];	Status1.
Status.	Query all output channels current status	V:[x1] -> [Y1];	Status.
Save [H].	Save current state to [H], [Y] is number 0 - 9	<Save to F1!>	Save8.
Recall [H].	Recall [H], [H] is number 0-9	<Recall from F1!>	Recall8.

Clear [H].	Clear data of [H]	<Clear F1!>	Clear8.
FanTemp[H].	Set fan temperature, start fan at [H]	<Set Succeed!>	FanTemp30.
<control/.../>	Control screen ... The instructions to control the big screen, supported maximum bit is 50 bits. In controlling the network, data is forwarded from serial port 0, while date is forwarded from another serial port in controlling the serial port.	<Set Succeed!>	<control/open com0/>

**Instructions to acquire board information**

/:ScanPortType;	Scan card slot	<Port/37/In/HDMI/Ver3.1/Ver1.2>	/:ScanPortType;
/:ScanPortResolution;	Scan all input/output boards resolution	<Resolution/37/In/noinput>	/:ScanPortResolution;
\$(X1)ReadInResolution!	Acquire channel [X1] input board resolution	<Resolution/37/In/noinput>	\$(X1)ReadInResolution!
\$(Y1)ReadOutResolution!	Acquire channel [Y1] output board resolution	<Resolution/37/Out/unknown>	\$(Y1)ReadOutResolution!
\$(X1)ReadInType!	Acquire channel [X1] input board type	<Type/37/In/HDMI>	\$(X1)ReadInType!
\$(Y1)ReadOutType!	Acquire channel [Y1] output board type	<Type/37/Out/HDMI>	\$(Y1)ReadOutType!
\$(X1)TemperatureIn!	Acquire channel [X1] input board temperature	<temp/[37,40]/In/24.5>	\$(X1)TemperatureIn!
\$(Y1)TemperatureOutput!	Acquire channel [Y1] output board temperature	<temp/[37,40]/Out/24.5>	\$(Y1)TemperatureOutput!
AllTemperatureIn!	Analyze all channels input board temperature	<temp/[37,40]/In/24.5> <temp/[65,68]/In/25.5>	AllTemperatureIn!
AllTemperatureOutput!	Analyze all channels output board temperature	<temp/[37,40]/Out/24.5> <temp/[61,64]/Out/26.5>	AllTemperatureOutput!
AllAnalyseOut!	Analyze all output chips work status		AllAnalyseOut!
AllAnalyseIn!	Analyze all input chips work status		AllAnalyseIn!
\$(X1)AnalyseIn!	Analyze work status of channel [X1] input board chips		\$(X1)AnalyseIn!
\$(Y1)AnalyseOut!	Analyze work status of channel [Y1] output board chips		\$(Y1)AnalyseOut!

**Instructions to choose audio infrared serial port**

\$[X1]AudioA!	Select channel [X1] input board analog audio/phoenix infrared serial port input	<Set Succeed!>	\$1AudioA!
\$[X1]AudioD!	Select channel [X1] input board signal audio/network infrared serial port input	<Set Succeed!>	\$1AudioD!
[\$Y1]AudioAOut!	Select channel [Y1] output board infrared serial port phoenix output	<Set Succeed!>	\$1AudioAOut!
[\$Y1]AudioDOut!	Select channel [Y1] output board infrared serial port output	<Set Succeed!>	\$1AudioDOut!
EDID management instructions	(in acquiring EDID, EDID data is between <EDID Start/ and /EDID End>. If you want to update or edit EDID on PC, send Update EDID[X1] first to assign a path, then sent updated EDID data, in the end, send UpdateEnd.		
GetInEDID[X1].	Acquire channel [X1] input board EDID (HDMI DVI board effective, is the EDID of current device)	<EDID Start/.../EDID End>	GetInEDID1.
GetOutEDID[Y1].	Acquire channel [Y1] output board EDID (HDMI DVI board effective, is the EDID of current device)	<EDID Start/.../EDID End>	GetOutEDID1.
[Y1]EDIDTo[X1].	Read and output channel [Y1] EDID, and input it to channel [X1] (HDMI DVI board effective)	<Set EDID succeed!>	1EDIDTo1.
UpdateEDID[X1].	Update channel [X1] EDID on PC, (HDMI DVI board effective)	<Update EDID start!>	UpdateEDID1.
UpdateEnd.	Exit update EDID	<Exit Update EDID!>	UpdateEnd.
<b>Instructions to switch audio</b>			
[X1]V[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	V:[X1] -> [Y1];	1V1.
[X1]v[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	v:[X1] -> [Y1];	1v1.
[X1]B[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	B:[X1] -> [Y1];	1B1.
[X1]b[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	b:[X1] -> [Y1];	1b1.
[X1]V[Y1],[Y2],[Y3]	Channel [X1] input, channel [Y1][Y2][Y3] output	V:[X1] -> [Y1];	1V1,2,3.
[X1]All.	Channel [X1] input, all channels output. When [X1] is 0, it represents closing all channel audio.	V:[X1] -> [x2];	1All.
All\$.	Close all channels	V:[X1] -> [x2];	All\$.
[X1]\$.	Close channel [X1] output	V:[X1] -> [x2];	1\$.

All#.	Input channels and output channels are mapped respectively.	V:[X1] -> [x2];	All#.
Demo.	The system is set at demo mode. In this mode, each input/output channel will be switched in turn; the time interval is 3 seconds.	<System enter into demo mode!>	Demo.

**Instructions to control the network**

<^SPORT>	Query the port number of current matrix network	<SPORT:[X1]>	<^SPORT>
<^SIPR>	Query the IP of current matrix network	<SIPR:[X1].[X2].[X3].[X4]>	<^SIPR>
<^SUBR>	Query the subnet mask of current matrix network	<SUBR:[X1].[X2].[X3].[X4]>	<^SUBR>
<^GAR>	Query the gateway of current matrix network	<GAR:[X1].[X2].[X3].[X4]>	<^GAR>
<^SHAR>	Query hardware address of current matrix network	<SHAR:[X1].[X2].[X3].[X4].[X5].[X6]>	<^SHAR>
<#SPORT[5000]>	Set port number of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#SPORT5000>
<#SIPR[192]. [168]. [0]. [2]>	Set IP of matrix network (take effect after re-power)	<Set Network Succeeded!>	<#SIPR192. 168. 0. 23>
<#GAR[192]. [168]. [0]. [1]>	Set gateway of of matrix network (take effect after re-power)	<Set Network Succeeded!>	<#GAR192. 168. 0. 11>
<#SUBR[255]. [255]. [255]. [0]>	Set subnet mask of matrix network (take effect after re-power)	<Set Network Succeeded!>	<#SUBR255. 255. 255. 0>
<#SHAR[00]. [11]. [22]. [33]. [44]. [55]>	Set hardware address (hex) of matrix network (take effect after re-power)	<Set Network Succeeded!>	<#SHAR00. 11. 22. 33. 44. 55>
<#NETDEFAULT>	Network configuration restore to factory settings (take effect after re-power)	<Set Network Succeeded!>	<#NETDEFAULT>

**Instructions to control preview boards**

<^HSPORT>	Query the port number of preview board network	<HSPORT:[X1]>	<^SPORT>
<^HSSIPR>	Query the IP of preview board network	<HSSIPR:[X1].[X2].[X3].[X4]>	<^SIPR>
<^HSSUBR>	Query the subnet mask of preview board network	<HSSUBR:[X1].[X2].[X3].[X4]>	<^SUBR>
<^HSGAR>	Query the gateway of preview board network	<HSGAR:[X1].[X2].[X3].[X4]>	<^GAR>
<^HSSHAR>	Query hardware address of preview board network	<HSSHAR:[X1].[X2].[X3].[X4].[X5].[X6]>	<^SHAR>



<#HSSPORT[5000]>	Set port number of preview board network (take effect after re-power)	<Set Network Succeed!>	<#SPORT[5000]>
<#HSSIPR[192]. [168]. [0]. [2]>	Set IP of preview board network (take effect after re-power)	<Set Network Succeed!>	<#SIPR192. 168. 0. 23>
<#HSGAR [192]. [168]. [0]. [1]>	Set gateway of preview board network (take effect after re-power)	<Set Network Succeed!>	<#GAR192. 168. 0. 11>
<#HSSUBR [255]. [255]. [0]>	Set subnet mask of preview board network (take effect after re-power)	<Set Network Succeed!>	<#SUBR255. 255. 255. 0>
<#HSSHAR [00]. [11]. [22]. [33]. [44]. [55]>	Set hardware address(hex) of preview board network (take effect after re-power)	<Set Network Succeed!>	<#SHAR0. 11. 22. 33. 44. 55>
<#HSNETDEFAULT>	Network configuration restore to factory settings	<Set Network Succeed!>	<#NETDEFAULT>
<^HSResolution1280*720>	Coding resolution of preview board is set as 1280*720	<Set Succeed!>	<^HSResolution1280*720>
<^HSResolution800*600>	Coding resolution of preview board is set as 800*600	<Set Succeed!>	<^HSResolution800*600>
<^HSResolution640*480>	Coding resolution of preview board is set as 640*480	<Set Succeed!>	<^HSResolution640*480>
<^HSResolution352*288>	Coding resolution of preview board is set as 352*288	<Set Succeed!>	<^HSResolution352*288>
<^HSResolution>	Query current resolution of preview board	<^HSResolution_is_1280*720> or <^HSResolution_is_800*600> or <^HSResolution_is_640*480> or <^HSResolution_is_352*288>	Multicast address is 224.1.1.1---224.1.1.2, the port is Port+2, Ports_640*480, Port+4, Port+6, Port+8 (Port is TCP linking port)

**Instructions to switch infrared serial port**

[RX1]R[TY1].	Link serial port receiving channel [RX1] of input port to serial port sending channel [TY1] of output port (RS232 forward channel switching)	RS:[RX1]->[TY1];	1R2.
[RY1]S[TX1].	Link serial port receiving channel [RY1] of output port to serial port sending channel [TX1] of input port	TS:[RY1]->[TX1];	1S2.
[RX1]Q[TY1].	Link infrared receiving channel [RX1] of input port to infrared sending channel [TY1] of output port (IR forward channel switching)	IR:[RX1]->[TY1];	1Q2.

[RY1]F[TX1].	Link infrared receiving channel [RY1] of output port to infrared sending channel [TX1] of input port	TR:[RY1]->[TX1];	2F1.
[RX1]T[TY1].	Link serial port/infrared receiving channel [RX1] of input port to serial port/infrared sending channel [TY1] of output port (RS232/IR forward channel switching)	T:[RX1]->[TY1];	1T2.

**Instructions to change single output resolution**

[\$Y1]->800x600x60Hz!	Channel [Y1] output resolution is 800x600x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->800x600x60Hz!
[\$Y1]->1024x768x60Hz!	Channel [Y1] output resolution is 1024x768x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1024x768x60Hz!
[\$Y1]->1280x720x50Hz!	Channel [Y1] output resolution is 1280x720x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1280x720x50Hz!
[\$Y1]->1280x720x60Hz!	Channel [Y1] output resolution is 1280x720x60Hz	<Set Resolution Succeeded!>	\$1->1280x720x60Hz!
[\$Y1]->1280x768x60Hz!	Channel [Y1] output resolution is 1280x768x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1280x768x60Hz!
[\$Y1]->1280x800x60Hz!	Channel [Y1] output resolution is 1280x800x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1280x800x60Hz!
[\$Y1]->1280x960x60Hz!	Channel [Y1] output resolution is 1280x960x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1280x960x60Hz!
[\$Y1]->1280x1024x60Hz!	Channel [Y1] output resolution is 1280x1024x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1280x1024x60Hz!
[\$Y1]->1360x768x60Hz!	Channel [Y1] output resolution is 1360x768x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1360x768x60Hz!
[\$Y1]->1366x768x60Hz!	Channel [Y1] output resolution is 1366x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1366x768x60Hz!
[\$Y1]->1440x900x60Hz!	Channel [Y1] output resolution is 1440x900x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1440x900x60Hz!
[\$Y1]->1600x900x60Hz!	Channel [Y1] output resolution is 1600x900x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1600x900x60Hz!

\$[Y1]->1600x1200x60Hz!	Channel [Y1] output resolution is 1600x1200x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1600x1200x60Hz!
\$[Y1]->1920x1080x25Hz!	Channel [Y1] output resolution is 1920x1080x25Hz (SDI HDMI board is valid)	<Set Resolution Succeeded!>	\$1->1920x1080x25Hz!
\$[Y1]->1920x1080x30Hz!	Channel [Y1] output resolution is 1920x1080x30Hz (SDI HDMI board is valid)	<Set Resolution Succeeded!>	\$1->1920x1080x30Hz!
\$[Y1]->1920x1080x50Hz!	Channel [Y1] output resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$1->1920x1080x50Hz!
\$[Y1]->1920x1080x60Hz!	Channel [Y1] output resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$1->1920x1080x60Hz!
\$[Y1]->1920x1200x60Hz!	Channel [Y1] output resolution is 1920x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1920x1200x60Hz!
\$[Y1]->1920x540x50Hz!	Channel [Y1] output resolution is 1920x540x50Hz(1920x1080ix50Hz)	<Set Resolution Succeeded!>	\$1->1920x540x50Hz!
\$[Y1]->1920x540x60Hz!	Channel [Y1] output resolution is 1920x540x60Hz(1920x1080ix60Hz)	<Set Resolution Succeeded!>	\$1->1920x540x60Hz!

**Instructions to change all output resolution**

\$All->800x600x60Hz!	All channel resolution is 800x600x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->800x600x60Hz!
\$All->1024x768x60Hz!	All channel resolution is 1024x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1024x768x60Hz!
\$All->1280x720x50Hz!	All channel resolution is 1280x720x50Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x720x50Hz!
\$All->1280x720x60Hz!	All channel resolution is 1280x720x60Hz	<Set Resolution Succeeded!>	\$All->1280x720x60Hz!
\$All->1280x768x60Hz!	All channel resolution is 1280x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x768x60Hz!
\$All->1280x800x60Hz!	All channel resolution is 1280x800x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x800x60Hz!
\$All->1280x960x60Hz!	All channel resolution is 1280x960x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x960x60Hz!
\$All->1280x1024x60Hz!	All channel resolution is 1280x1024x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x1024x60Hz!
\$All->1360x768x60Hz!	All channel resolution is 1360x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1360x768x60Hz!
\$All->1366x768x60Hz!	All channel resolution is 1366x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1366x768x60Hz!

\$All->1440x900x60Hz!	All channel resolution is 1440x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1440x900x60Hz!
\$All->1600x900x60Hz!	All channel resolution is 1600x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1600x900x60Hz!
\$All->1600x1200x60Hz!	All channel resolution is 1600x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1600x1200x60Hz!
\$All->1920x1080x50Hz!	All channel resolution is 1920x1080x50Hz	<Set Resolution Succeeded!>	\$All->1920x1080x50Hz!
\$All->1920x1080x25Hz!	All channel resolution is 1920x1080x25Hz(SDI HDMI is valid)	<Set Resolution Succeeded!>	\$All->1920x1080x25Hz!
\$All->1920x1080x30Hz!	All channel resolution is 1920x1080x30Hz(SDI HDMI is valid)	<Set Resolution Succeeded!>	\$All->1920x1080x30Hz!
\$All->1920x540x50Hz!	All channel resolution is 1920x540x50Hz(1920x1080x50Hz)	<Set Resolution Succeeded!>	\$All->1920x540x50Hz!
\$All->1920x1080x60Hz!	All channel resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$All->1920x1080x60Hz!
\$All->1920x540x60Hz!	All channel resolution is 1920x540x60Hz(1920x1080x60Hz)	<Set Resolution Succeeded!>	\$All->1920x540x60Hz!
\$All->1920x1200x60Hz!	All channel resolution is 1920x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1920x1200x60Hz!

**Instructions for VGA output board to output signals**

\$[Y1]VGAOut!	Set channel [Y1] output board as VGA output	<The Port Signal Setting Succeeded!>	\$1VGAOut!
\$[Y1]YUVOut!	Set channel [Y1] output board as YUV output	<The Port Signal Setting Succeeded!>	\$1YUVOut!

**Instructions to adjust VGA input/output signals ( choose the channel before setting corresponding parameters VGA )**

SetVGAIn[X1].	Set channel [X1] VGA input signal	<Set Succeeded!>	SetVGAIn1.
SetVGAOut[Y1].	Set channel [Y1] VGA output signal	<Set Succeeded!>	SetVGAOut1.
Bright[H].	Set brightness value of channel [X1] as H (VGA IN/OUT:50)(range from 0 to 100)	<Set Succeeded!>	Bright50.
Contrast[H].	Set contrast value of channel [X1] as H (VGA IN/OUT:50)(range from 0 to 100)	<Set Succeeded!>	Contrast50.
Saturation[H].	Set saturation value of channel [X1] as H (VGA IN:50)VGA input is valid (range from 0 to 100)	<Set Succeeded!>	Saturation50.
Sharp[H].	Set sharp value of channel [X1] as H (VGA IN:50)VGA input is valid (range from 0 to 100)	<Set Succeeded!>	Sharp50.
Red[H].	Set Red value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeeded!>	Red128.

Green[H].	Set Green value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeed!>	Green128.
Blue[H].	Set Blue value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeed!>	Blue128.
AutoConfig.	Set channel [X1] automatic adjustment (VGA input is valid)	<Set Succeed!>	AutoConfig.
HPosUp.	Set channel [X1] horizontal position +1 (VGA input is valid)	<Set Succeed!>	HPosUp.
HPosDown.	Set channel [X1] horizontal position -1 (VGA input is valid)	<Set Succeed!>	HPosDown.
VPosUp.	Set channel [X1] vertical position +1 (VGA input is valid)	<Set Succeed!>	VPosUp.
VPosDown.	Set channel [X1] vertical position -1 (VGA input is valid)	<Set Succeed!>	VPosDown.
HSizeUp.	Set channel [X1] horizontal size +1 (VGA input is valid)	<Set Succeed!>	HSizeUp.
HSizeDown.	Set channel [X1] horizontal size -1 (VGA input is valid)	<Set Succeed!>	HSizeDown.
VSizeUp.	Set channel [X1] vertical size +1 (VGA input is valid)	<Set Succeed!>	VSizeUp.
VSizeDown.	Set channel [X1] vertical size -1 (VGA input is valid)	<Set Succeed!>	VSizeDown.
PosReset.	Set channel [X1] video position reset (VGA input is valid)	<Set Succeed!>	PosReset.

## 4.2 Splicer instructions

instructions ( pc-->MAX72)	Functions	Returned information
<#MARGIN[X1],[x1]>	Screen spacing of video wall: [X1]: video wall identification [x1]: screen spacing	<Set Succeed!>
<#MAP[X1],[x1],[x2]>	Window x1 of video wall x mapped to output port x2	<Set Succeed!>
<#SIZE[X1],[x1],[x2]>	Window size of PC: [X1]: video wall identification [x1]: horizontal size [x2]: vertical size	<Set Succeed!>
<#VIR[X1],[x1],[x2]>	Window array of PC: [X1]: video wall identification [x1]: number of horizontal windows [x2]: number of vertical windows	<Set Succeed!>
<#OPEN[X1],[x1],[x2],[x3],[x4],[x5],[x6],[x7]>	Setting parameters of opening new windows: [X1]: video wall identification [x1]: window identification [x2]: input source [x3]: layer number [x4]: window horizontal position [x5]: window vertical position [x6]: window horizontal length [x7]: window vertical length	<Set Succeed!>

<#MOVE[X1],[x1],[x2],[x3]>	Setting parameters of moving windows: [X1]: video wall identification [x1]: window identification [x2]: window horizontal position [x3]: window vertical position	<Set Succeed!>
<#RESIZE[X1],[x1],[x2],[x3],[x4],[x5]>	Setting parameters of stretching windows: [X1]: video wall identification [x1]: window identification [x2]: window horizontal position [x3]: window vertical position [x4]: window horizontal size [x5]: window vertical size	<Set Succeed!>
<#LAYER[X1],[x1],[x2]>	Setting parameters of window layers: [X1]: video wall identification [x1]: window identification [x2]: layer number	<Set Succeed!>
<#CLOSE[X1],[x1]>	Window closing setting: [X1]: video wall identification [x1]: window identification	<Set Succeed!>
<^JOINT>	Query spicing state of all video walls	<OPEN[X1],[x1],[x2],[x3],[x4],[x5],[x6],[x7]>
<^SIZE>	Query window size of PC	<SIZE[X1],[x1],[x2]>
<^VIR>	Query window array of PC	<VIR[X1],[x1],[x2]>
<^MAP>	Query mapping relation	<MAP[X1],[x1],[x2]>
<^MARGIN>	Query the setting parameters of screen pitch	<MARGIN[X1],[x1]>


# Chapter Five Software

## 5.1 Connection

1. Connect your PC to the Matrix on Ethernet by CAT5 cable for TCP/IP communication.

The default IP of matrix:192.168.1.190 Port:6666

2. Please set your PC as the bellowing IP

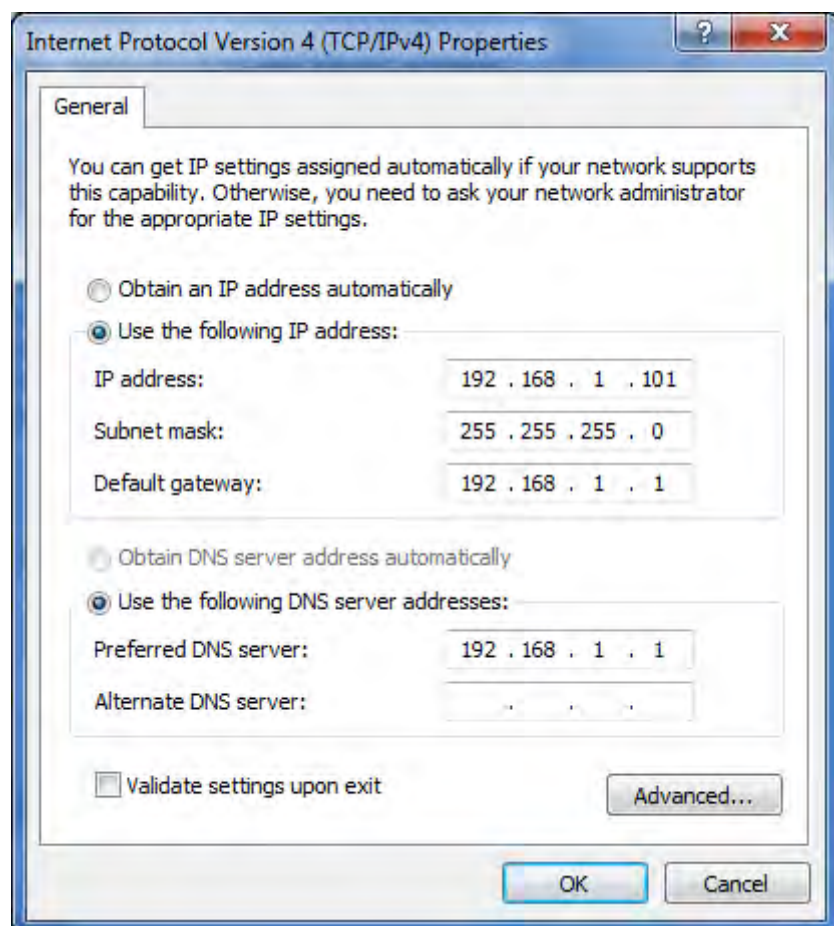


3. Launch the software




You will get the login interface as bellowing,

**User name: ADMIN**


**Password: admin**

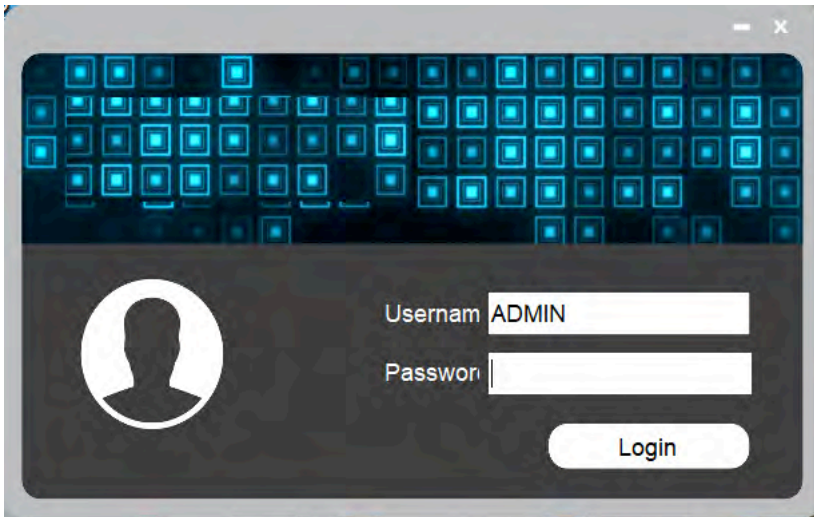

4. Click 'Connect' to connection.

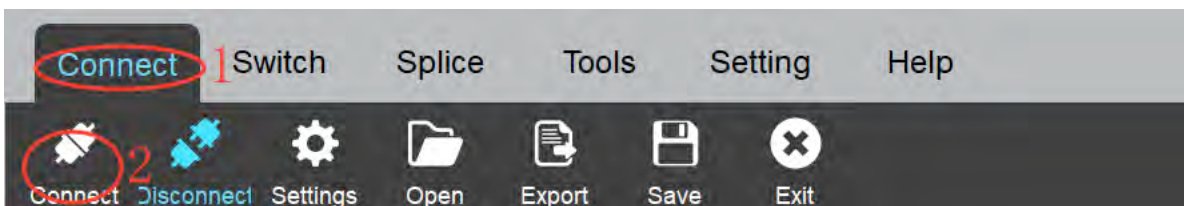


Connection status will display on the top bar

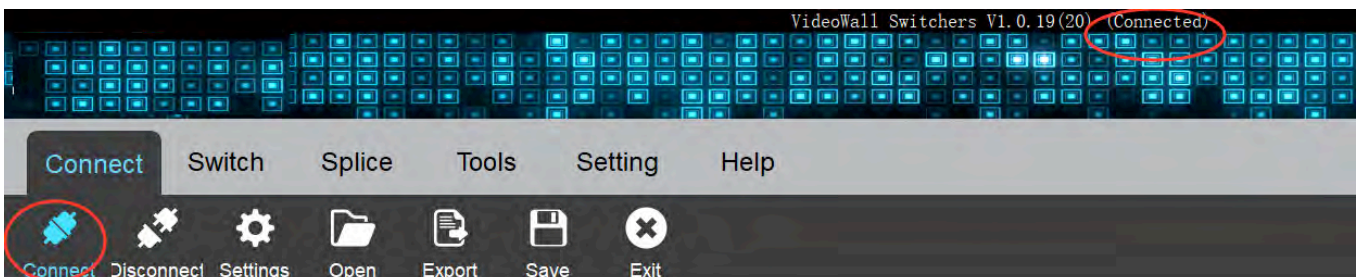


## 5.2 Interface introduction

Click 'Splice' menu and select the 'Wall 1' as bellowing picture




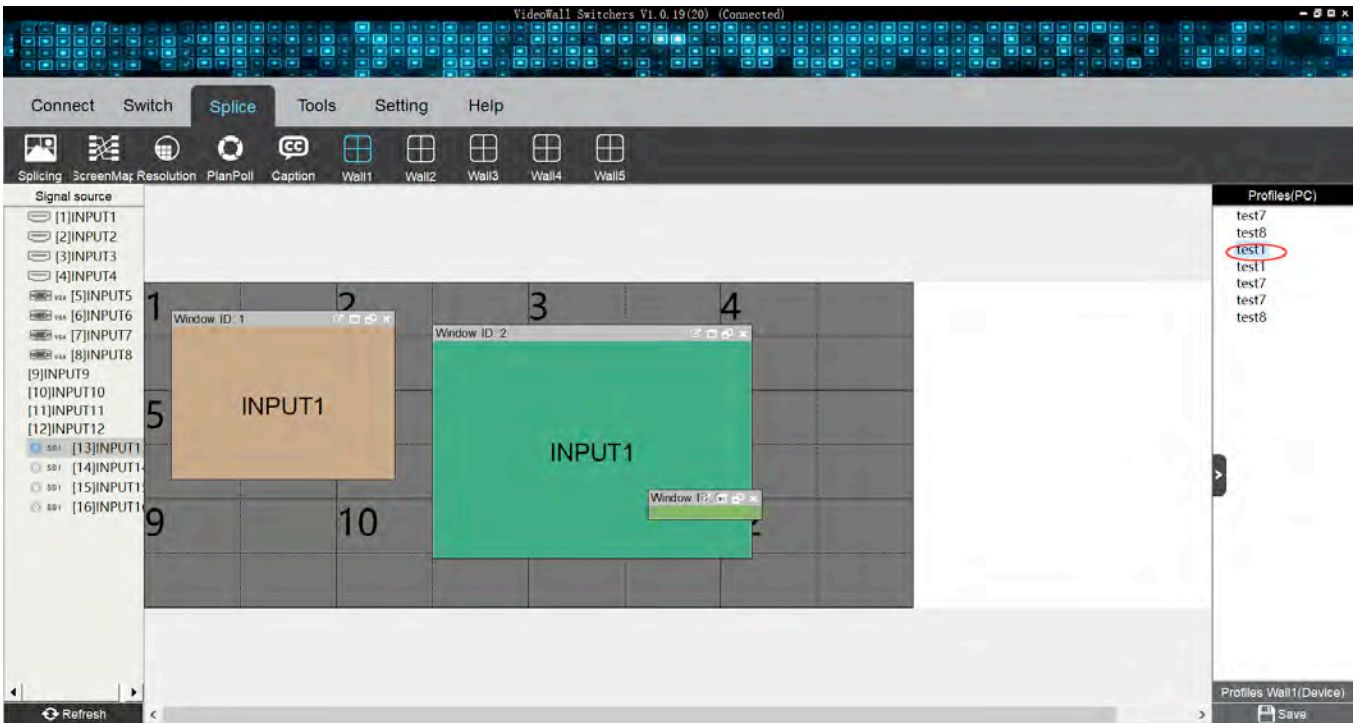


Overview

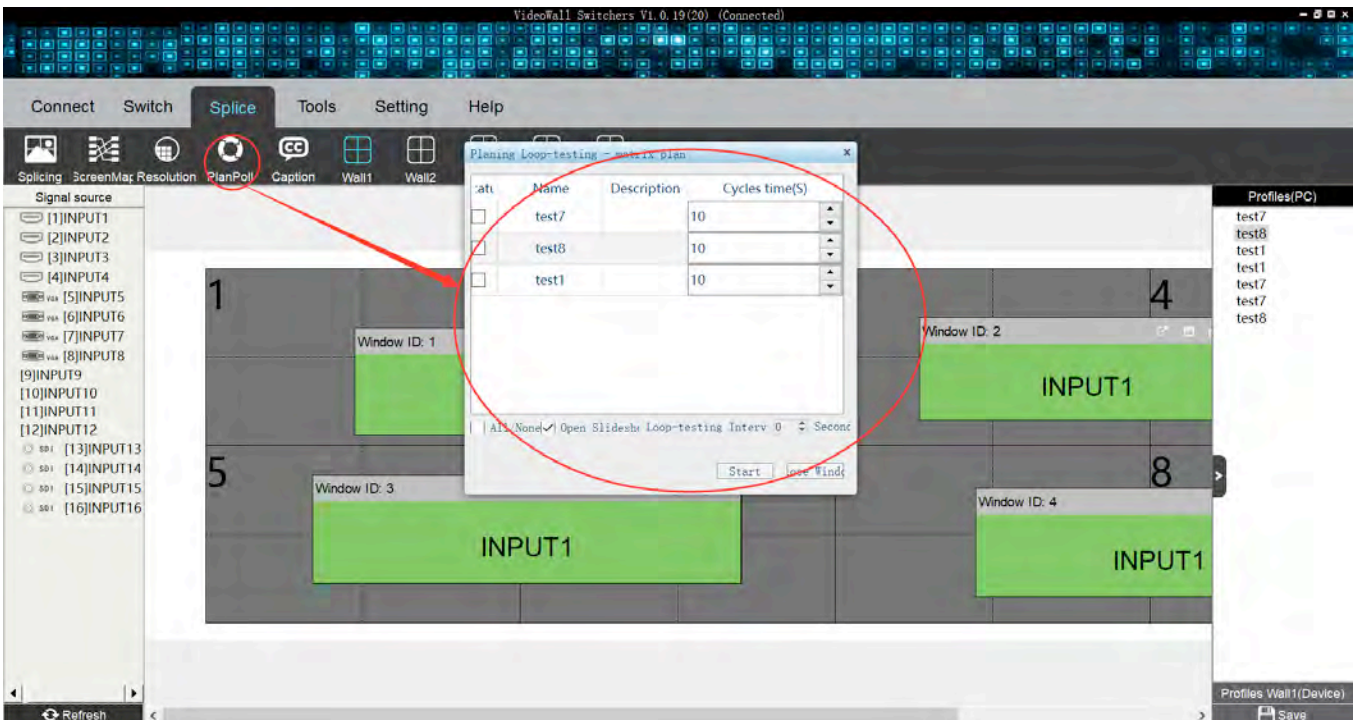

**Splicing** to set the panel quantity for row and column

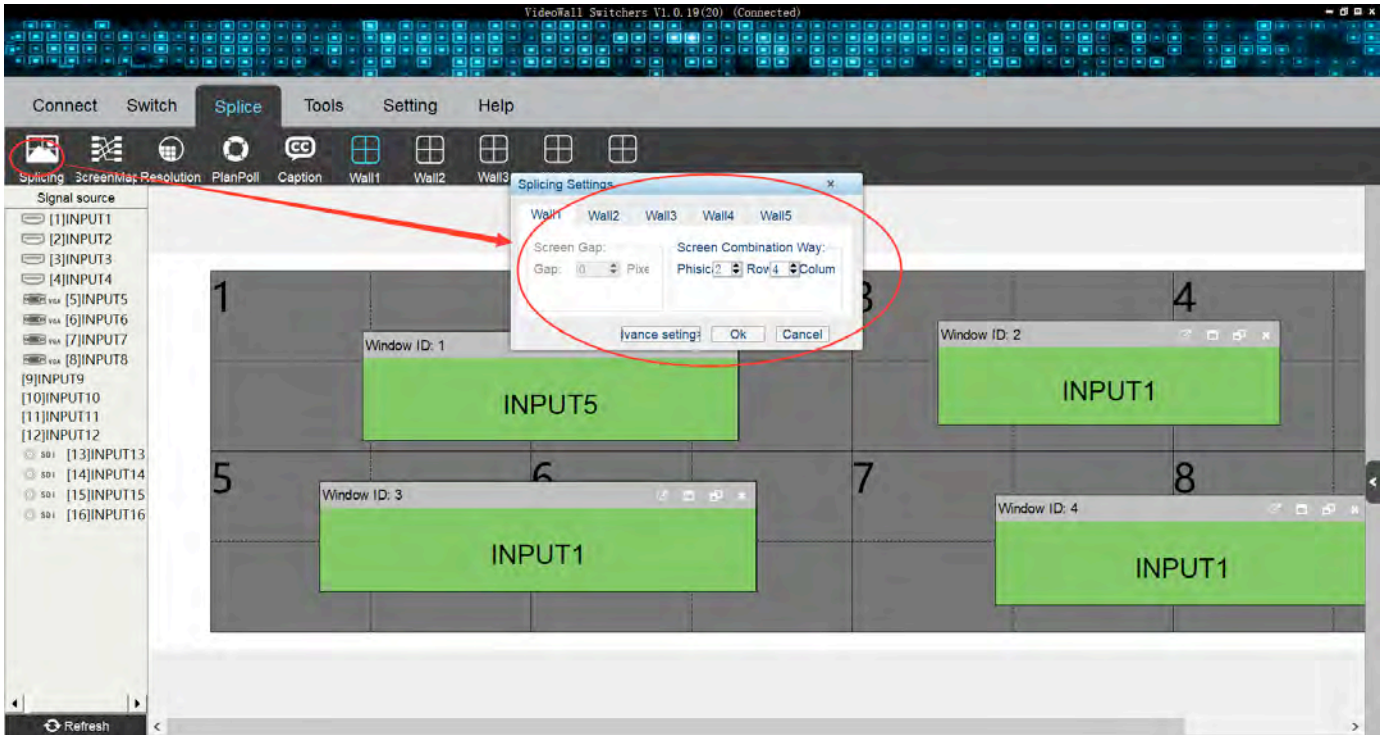


**Resolution** to set the display resolution for the panel

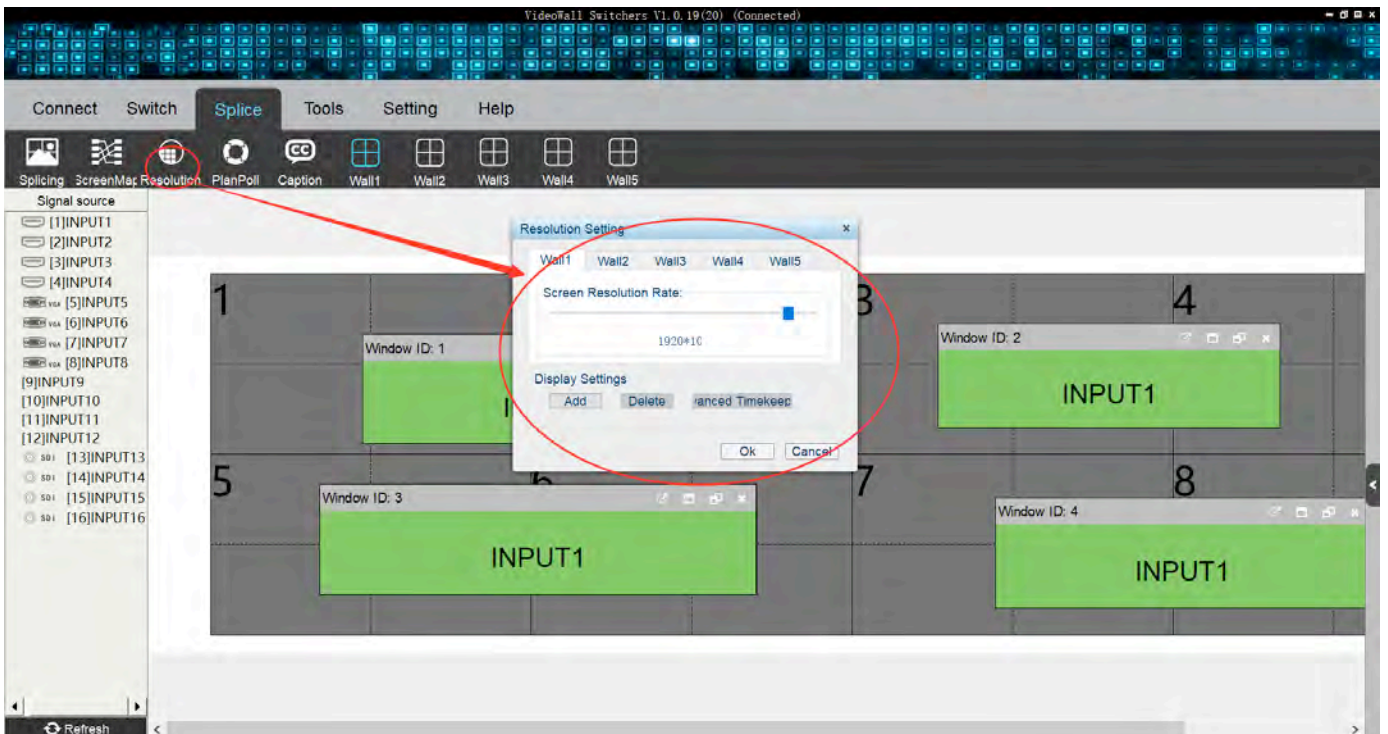




PlanPoll for switching profiles automatically

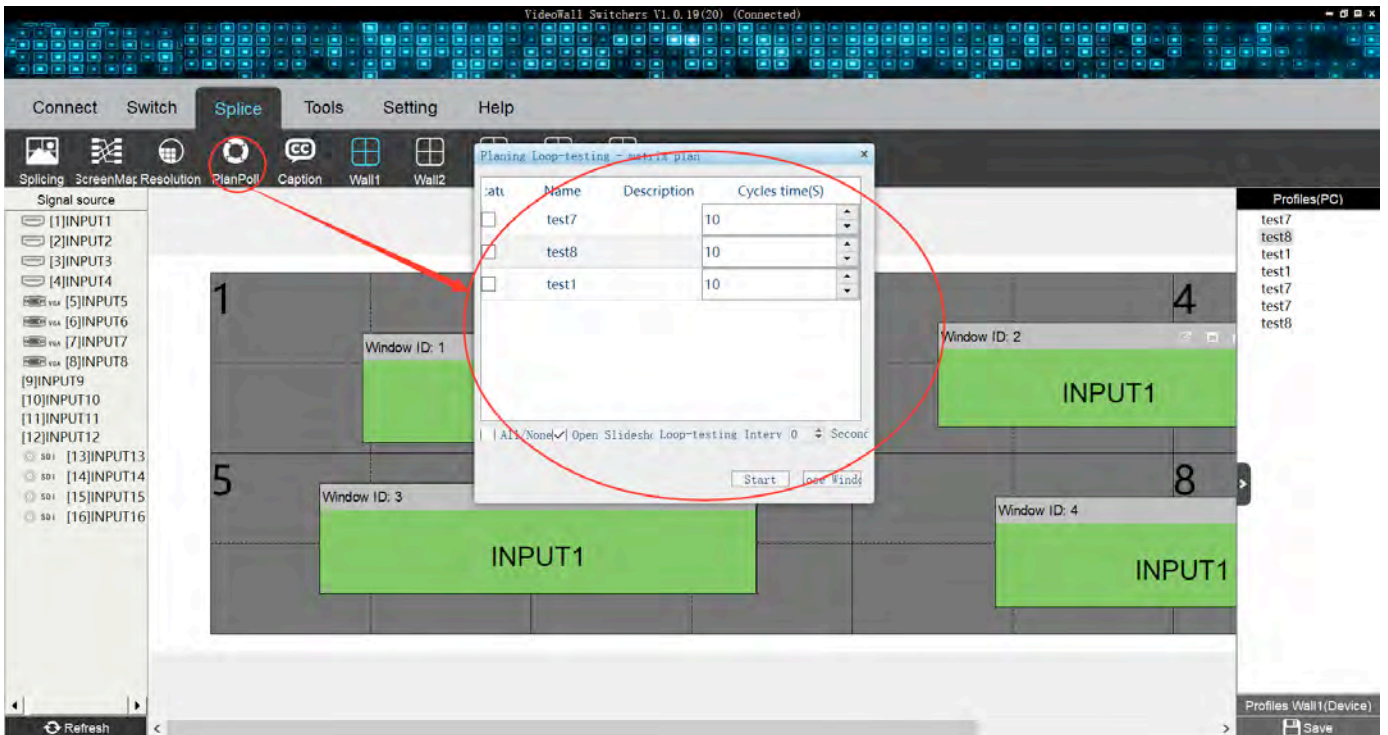


5.3 Drag & Drop to change the video source

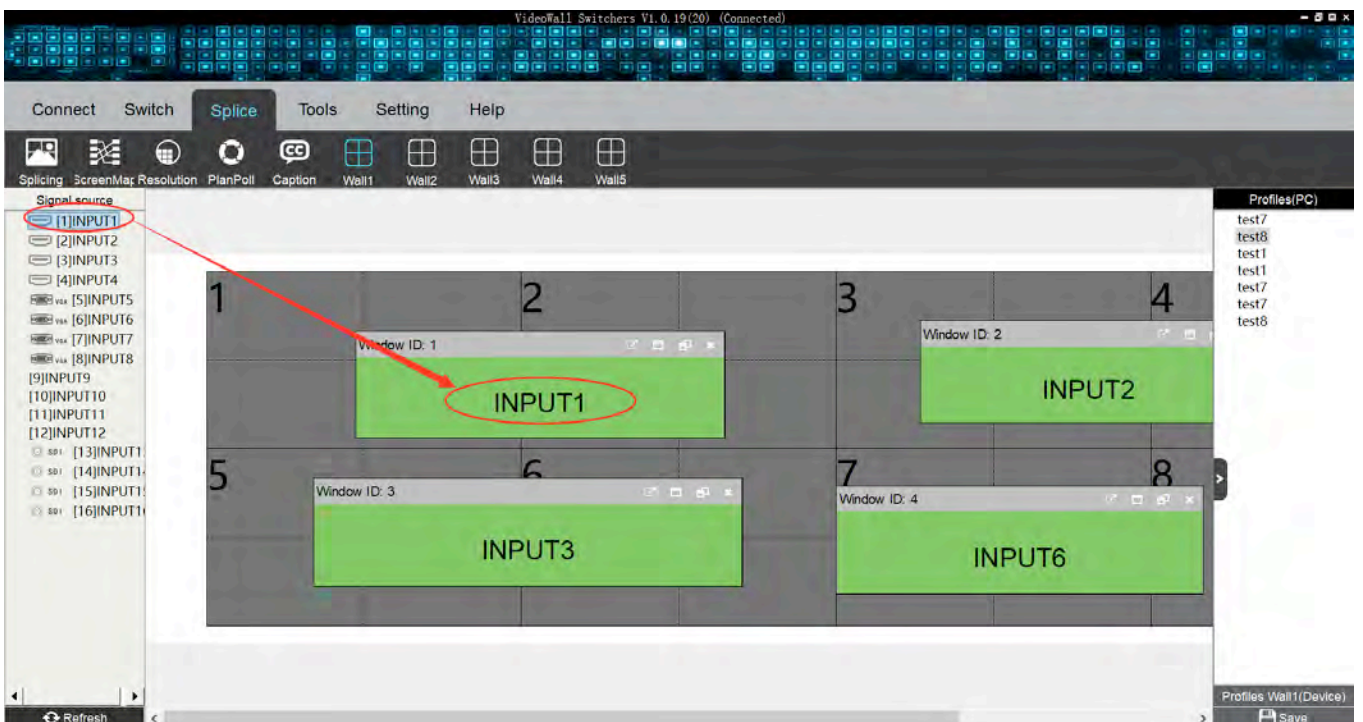


### 5.4 Change the output window size

The window can be freely moved and resize as you want.

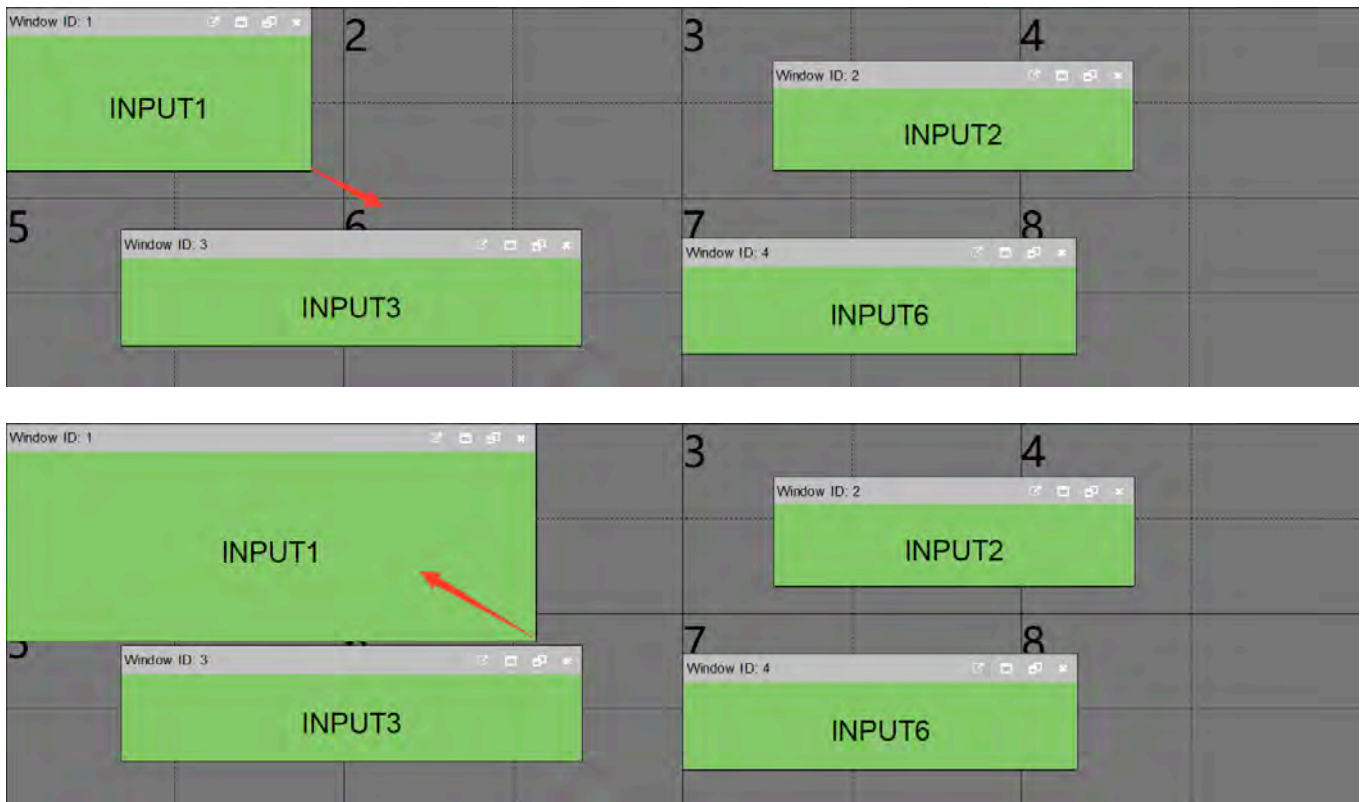


### 5.5 Save and Call the profile

Click the Save button to save the current status as profile on the PC or Device.

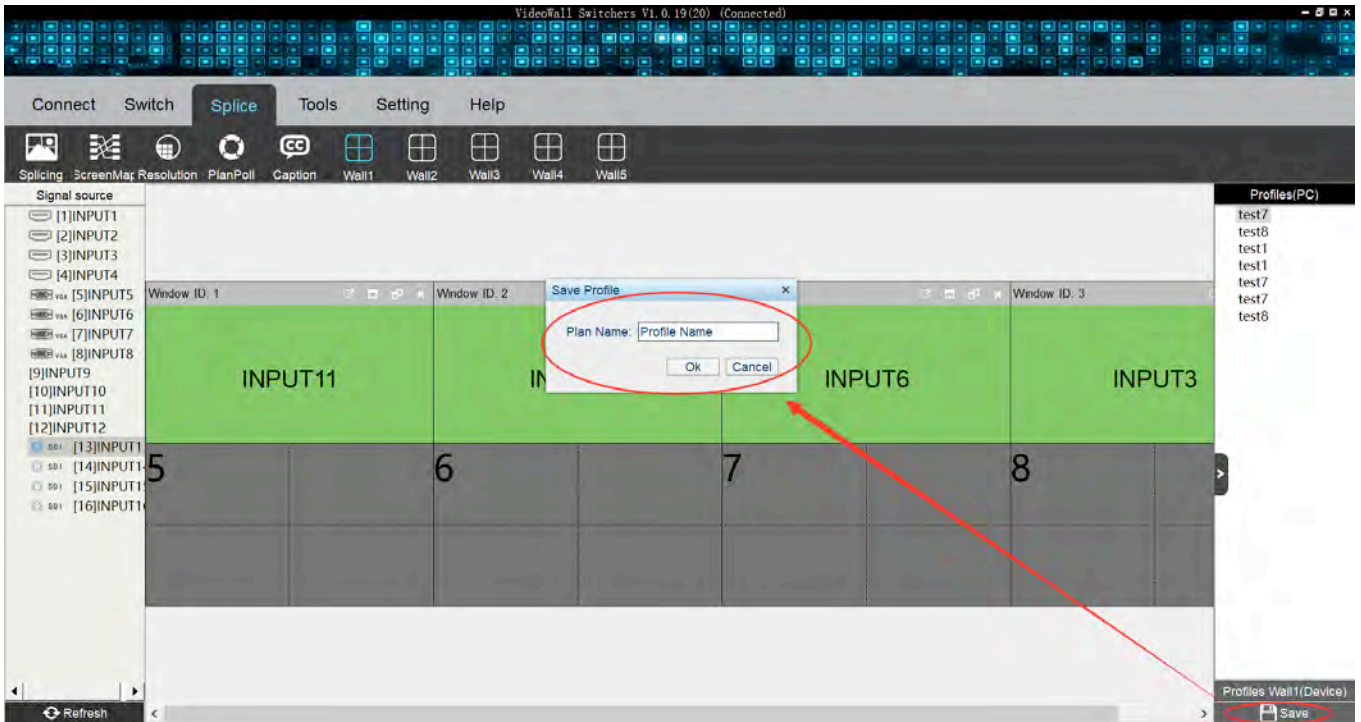

Double-click the profile to call the profile as current status.

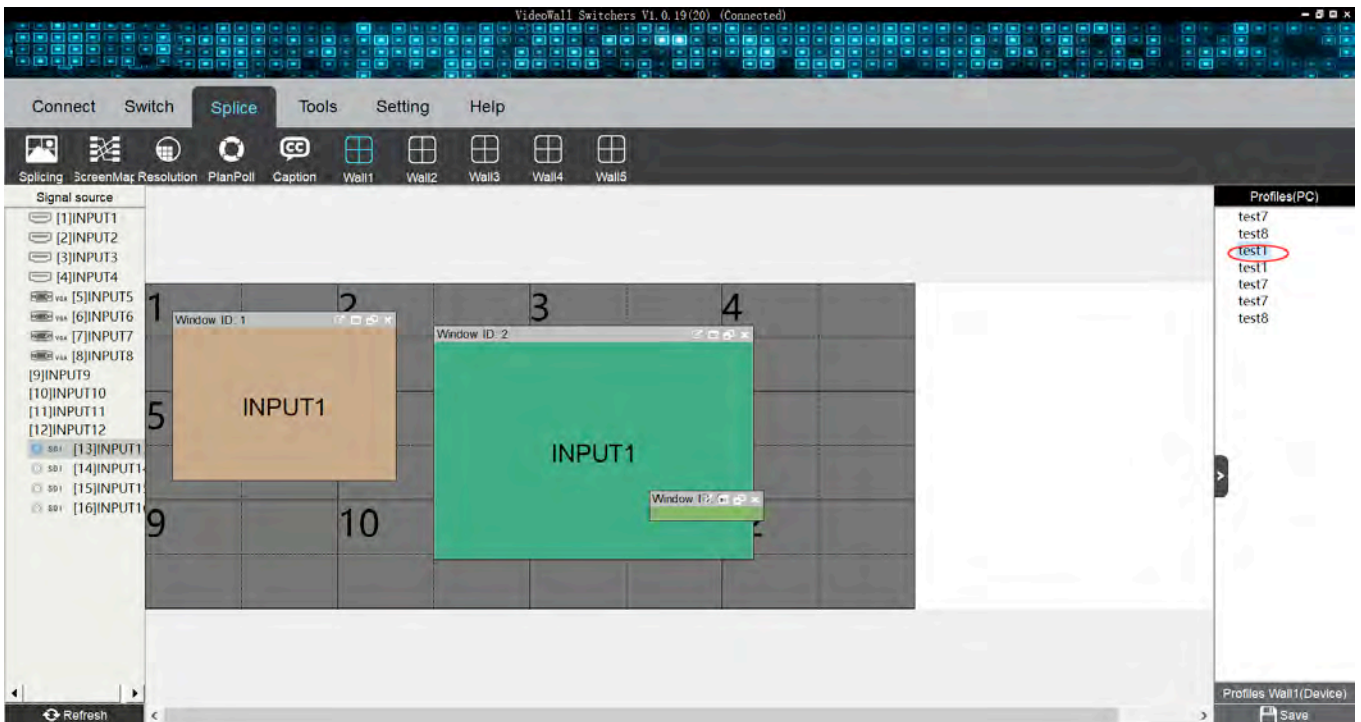

### 5.6 Matrix switching control(Seamless output card is needed)

